


HP ProLiant DL320 Generation 4 Server User Guide

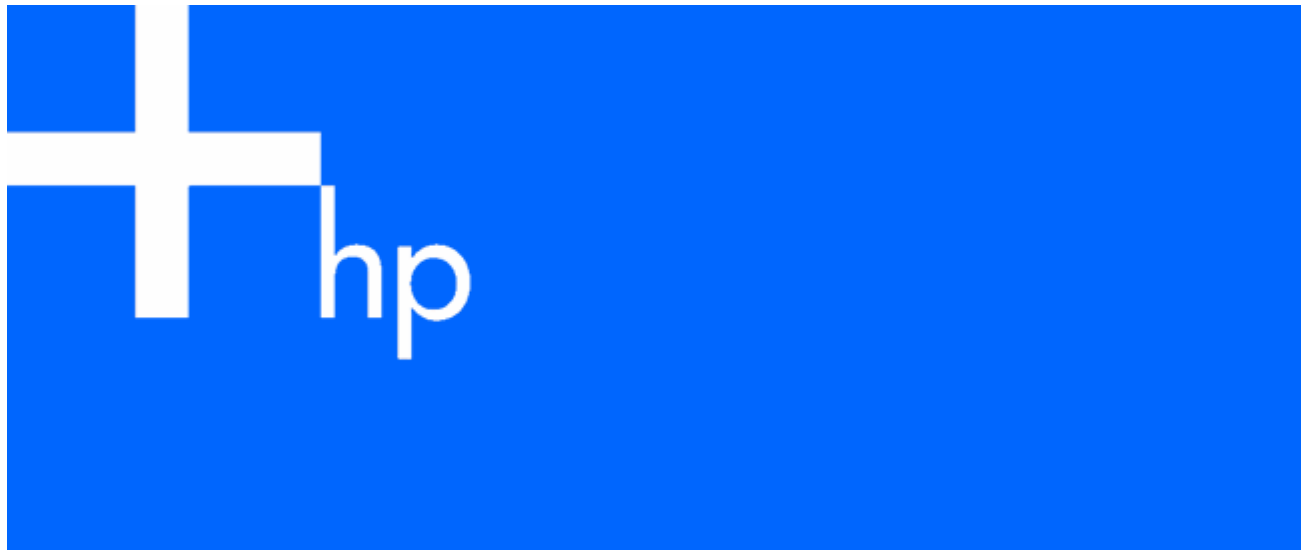

November 2005 (First Edition)
Part Number 394179-001



© Copyright 2005 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft, Windows, and Windows NT are U.S. registered trademarks of Microsoft Corporation.

Linux is a U.S. registered trademark of Linus Torvalds.

November 2005 (First Edition)
Part Number 394179-001

Audience assumptions

This document is for the person who installs, administers, and troubleshoots servers and storage systems. HP assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels.

Contents

Server component identification.....	6
Front panel components	6
Front panel LEDs and buttons	7
Rear panel components	8
Rear panel LEDs and buttons.....	9
System board components	10
System maintenance switch.....	10
NMI switch	11
System board LEDs	11
System LEDs and internal health LED combinations.....	12
Internal USB connector.....	13
SATA and SAS device numbers.....	14
Fan assembly location.....	14
Server operations.....	15
Powering up the server.....	15
Powering down the server	15
Preparation procedures	16
Extending the server from the rack	16
Removing the server from the rack	16
Removing the access panel.....	17
Installing the access panel	17
Removing the PCI riser board assembly.....	17
Installing the PCI riser board assembly	18
Removing the fan assembly.....	18
Installing the fan assembly	20
Server setup	21
Optional installation services	21
Rack planning resources.....	21
Optimum environment.....	22
Space and airflow requirements	22
Temperature requirements.....	23
Power requirements	23
Electrical grounding requirements	23
Rack warnings	24
Identifying the server shipping carton contents.....	24
Installing hardware options.....	24
Installing the server into the rack.....	25
Powering up and configuring	25
Installing the operating system.....	26
Registering the server.....	26
Hardware options installation.....	27
Introduction	27
Memory options	27
Interleaving and non-interleaving memory configuration	27
DIMM installation guidelines	27
Installing DIMMs	28
Hard drive options	28
Hard drive guidelines.....	29

Removing a hard drive blank	29
Removing hard drives	29
Installing hard drives	30
Optical drive assembly option	31
Diskette drive assembly option	35
Expansion board	39
Storage controller option	40
Installing PCI Express riser boards	41
Server cabling	43
Cabling overview	43
Server cable routing	43
Embedded SATA controller cable routing	44
Optional SATA/SAS controller cable routing	44
Server software and configuration utilities	45
Configuration tools	45
SmartStart software	45
HP ROM-Based Setup Utility	46
Array Configuration Utility	47
HP ProLiant Essentials Rapid Deployment Pack	47
Re-entering the server serial number and product ID	47
Management tools	48
Automatic Server Recovery	48
ROMPaq utility	48
Integrated Lights-Out 2 technology	48
Erase Utility	49
HP Systems Insight Manager	49
Management Agents	49
Redundant ROM support	49
USB support and functionality	50
Diagnostic tools	50
HP Insight Diagnostics	50
Survey Utility	51
Integrated Management Log	51
Array Diagnostic Utility	51
Keeping the system current	51
Drivers	51
Version control	52
ProLiant Support Packs	52
Operating system version support	52
System Online ROM Flash Component Utility	52
Change control and proactive notification	52
Care Pack	53
Troubleshooting	54
Troubleshooting resources	54
Server diagnostic steps	54
Important safety information	55
Symbols on equipment	55
Warnings and cautions	56
Preparing the server for diagnosis	56
Symptom information	57
Service notifications	57
Loose connections	57


Diagnostic steps	58
Start diagnosis flowchart	58
General diagnosis flowchart	59
Power-On Problems Flowchart	60
POST problems flowchart	62
OS boot problems flowchart	65
Server fault indications flowchart	66
POST error messages and beep codes	69
Battery replacement	70
Regulatory compliance notices	71
Regulatory compliance identification numbers	71
Federal Communications Commission notice	71
FCC rating label	71
Class A equipment	72
Class B equipment	72
Declaration of conformity for products marked with the FCC logo, United States only	72
Modifications	73
Cables	73
Canadian notice (Avis Canadien)	73
European Union regulatory notice	73
Japanese notice	74
BSMI notice	74
Korean notice A&B	74
Laser compliance	75
Battery replacement notice	75
Taiwan battery recycling notice	75
Power cord statement for Japan	76
Disposal of waste equipment by users in private households in the European Union	76
Electrostatic discharge	77
Preventing electrostatic discharge	77
Grounding methods to prevent electrostatic discharge	77
Server specifications	78
Environmental specifications	78
Server specifications	78
Technical support	80
Related documents	80
HP contact information	80
Customer self repair	80
Acronyms and abbreviations	81
Index	84

Server component identification

In this section


- Front panel components 6
- Front panel LEDs and buttons 7
- Rear panel components..... 8
- Rear panel LEDs and buttons 9
- System board components..... 10
- System board LEDs 11
- System LEDs and internal health LED combinations 12
- Internal USB connector..... 13
- SATA and SAS device numbers 14
- Fan assembly location 14

Front panel components

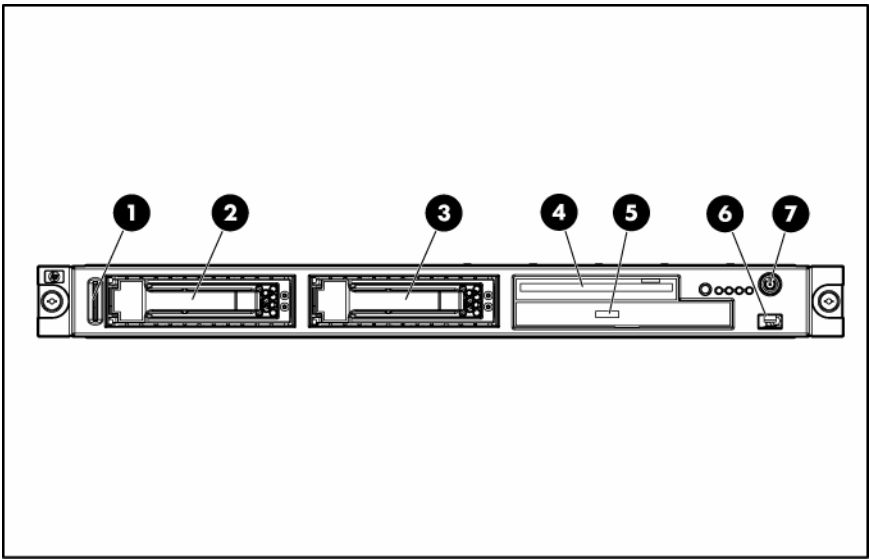


Item	Description
1	Serial label pull tab
2	Hard drive bay 1
3	Hard drive bay 2
4	Diskette drive bay
5	Optical drive bay
6	Front USB port
7	Power On/Standby button and system power LED

Front panel LEDs and buttons

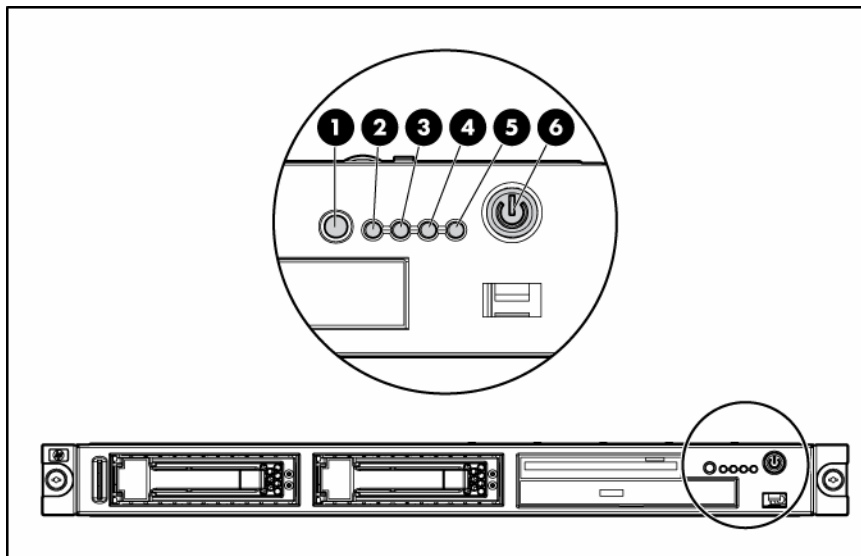


Item	Description	Status
1	UID button/LED	Blue = Identification is activated. Flashing blue = System is being remotely managed. Off = Identification is deactivated.
2	Internal health LED	Green = System health is normal. Amber = System is degraded. To identify the component in a degraded state, refer to system board LEDs (on page 11). Red = System critical. To identify the component in a critical state, refer to system board LEDs (on page 11). Off = System health is normal (when in standby mode).
3	NIC 1 link/activity LED	Green = Network link exists. Flashing green = Network link and activity exist. Off = No link to network exists. If power is off, view the LEDs on the RJ-45 connector for status by referring to the rear panel LEDs (" Rear panel LEDs and buttons " on page 9).
4	NIC 2 link/activity LED	Green = Network link exists. Flashing green = Network link and activity exist. Off = No link to network exists. If power is off, the front panel LED is not active. View the LEDs on the RJ-45 connector for status by referring to the rear panel LEDs (" Rear panel LEDs and buttons " on page 9).
5	Drive activity LED	Green = Drive activity is normal. Amber = Drive failure occurred. Off = No drive activity.
6	Power On/Standby button and system power LED	Green = System is on. Amber = System is shut down, but power is still applied. Off = Power cord is not attached, power supply failure has occurred, no power supplies are installed, facility power is not available, or the DC-to-DC converter is not installed.

Rear panel components

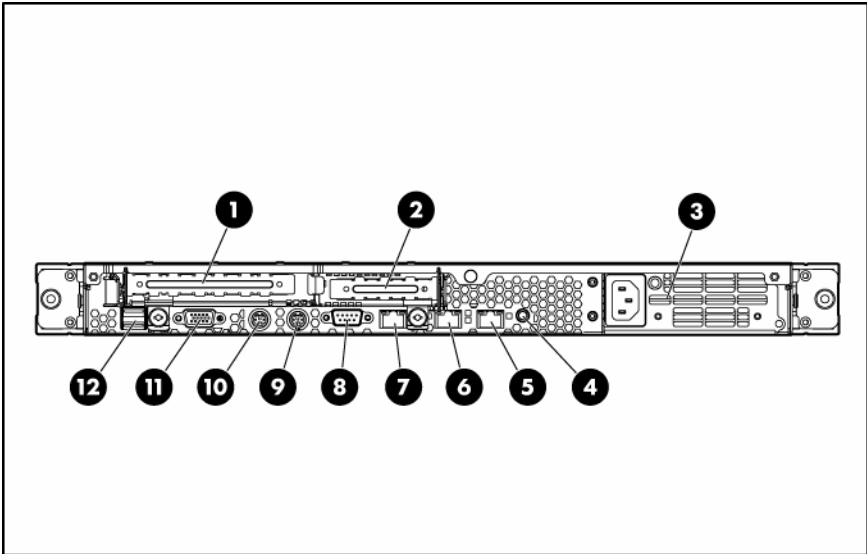


Item	Description
1	PCI-X expansion slot 2, full-length (optional PCI Express slot 1)
2	PCI Express expansion slot 1, low-profile, half-length
3	Power supply
4	UID button/LED
5	10/100/1000 NIC 2
6	10/100/1000 NIC 1
7	iLO 2 management port
8	Serial connector
9	Keyboard connector
10	Mouse connector
11	Video connector
12	USB connectors (2)

Rear panel LEDs and buttons

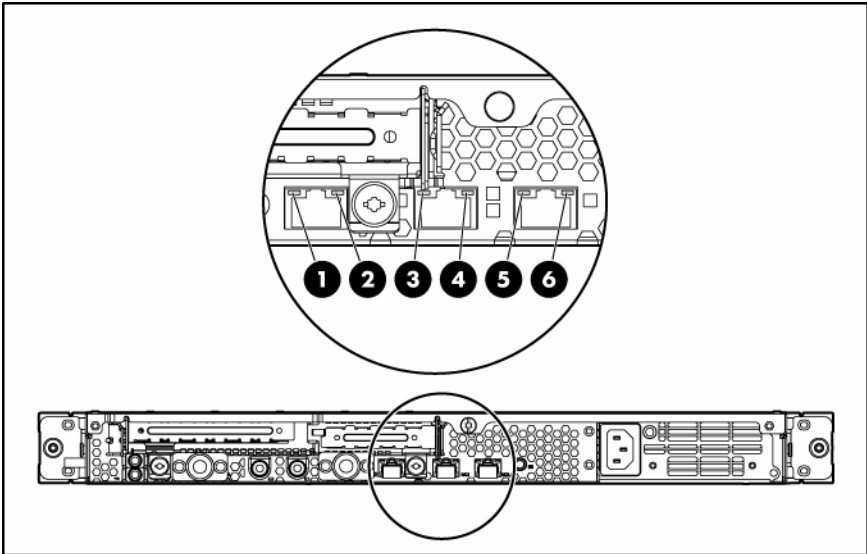

Item	Description	Status
1	iLO 2 activity	Green = Activity exists. Flashing green = Activity exists. Off = No activity exists.
2	iLO 2 link	Green = Link exists. Off = No link exists.
3	10/100/1000 NIC 1 activity	Green = Link exists. Flashing green = Activity exists. Off = No link exists.
4	10/100/1000 NIC 1 link	Green = Link exists. Off = No link exists.
5	10/100/1000 NIC 2 activity	Green = Activity exists. Flashing green = Activity exists. Off = No activity exists.
6	10/100/1000 NIC 2 link	Green = Link exists. Off = No link exists.

System board components

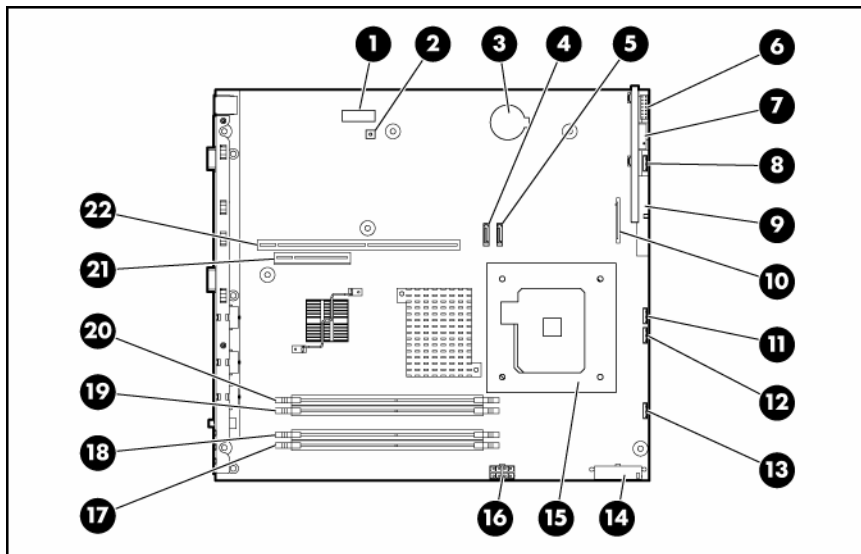

Item	Description	Item	Description
1	System maintenance switch	12	Fan 2 connector
2	NMI switch	13	Fan 1 connector
3	Battery	14	Main power connector
4	Hard drive connector 1	15	Processor socket
5	Hard drive connector 2	16	Auxiliary power connector
6	Front panel LED board connector	17	DIMM slot 4 (Bank B)
7	Front USB connectors (2)	18	DIMM slot 3 (Bank B)
8	Fan 4 connector	19	DIMM slot 2 (Bank A)
9	Optical drive connector	20	DIMM slot 1 (Bank A)
10	Diskette drive connector	21	PCI Express x8 connector
11	Fan 3 connector	22	PCI-X 133-MHz or optional PCI Express x8 connector

System maintenance switch

Position	Default	Function
S1	Off	Off = iLO 2 security is enabled On = iLO 2 security is disabled
S2	Off	Off = Normal operation On = RBSU will not commit any configuration changes *
S3	Off	Reserved
S4	Off	Off = Normal operation On = Override RBSU setting and enable diskette boot *

Position	Default	Function
S5	Off	Off = Power-on password enabled On = Power-on password disabled *
S6	Off	Off = Normal operation On = BIOS will clear CMOS and NVRAM *
S7	Off	Reserved
S8	Off	Reserved


* "On" activates the function.

NMI switch

The NMI switch allows administrators to perform a memory dump before performing a hard reset. Crash dump analysis is an essential part of eliminating reliability problems, such as hangs or crashes in operating systems, device drivers, and applications. Many crashes freeze a system, requiring you to do a hard reset. Resetting the system erases any information that would support root cause analysis.

Systems running Microsoft® Windows® operating systems experience a blue screen trap when the operating system crashes. When this happens, Microsoft® recommends that system administrators perform an NMI event by pressing a dump switch. The NMI event enables a hung system to become responsive again.

System board LEDs

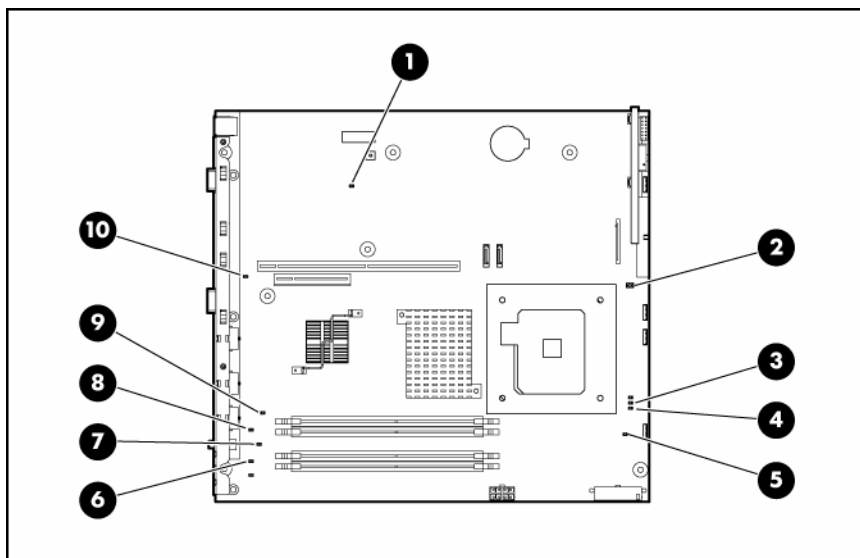

Item	LED Description	Status
1	Power supply signal	Amber = Power supply signal cable is not connected. Off = Power supply signal cable is connected.

Item	LED Description	Status
2	System fan module	Amber = One fan in this module has failed. Red = Multiple fans in this module have failed. Off = All fans in this module are operating normally.
3	Overtemperature	Amber = System has reached a cautionary or critical temperature level. Off = Temperature is OK.
4	Processor	Amber = Processor has failed. Off = Processor is operating normally.
5	PPM	Amber = PPM has failed. Off = PPM is operating normally.
6	DIMM 4	Amber = DIMM has failed. Off = DIMM is operating normally.
7	DIMM 3	Amber = DIMM has failed. Off = DIMM is operating normally.
8	DIMM 2	Amber = DIMM has failed. Off = DIMM is operating normally.
9	DIMM 1	Amber = DIMM has failed. Off = DIMM is operating normally.
10	PCI Riser interlock	Amber = PCI riser cage not seated. Off = PCI riser cage is seated.

System LEDs and internal health LED combinations


When the internal health LED on the front panel illuminates either amber or red, the server is experiencing a health event. Combinations of illuminated system LEDs and the internal health LED indicate system status.

The front panel health LEDs indicate only the current hardware status. In some situations, HP SIM may report server status differently than the health LEDs because the software tracks more system attributes.

System LED and Color	Internal Health LED Color	Status
Processor failure (Amber)	Red	One or more of the following conditions may exist: <ul style="list-style-type: none"> Processor has failed. Processor failed over to the offline spare. Processor is not installed in the socket. Processor is unsupported. ROM detects a failed processor during POST.
	Amber	Processor is in a pre-failure condition.
PPM failure (Amber)	Red	PPM has failed.
DIMM failure, slot X (Amber)	Red	<ul style="list-style-type: none"> DIMM in slot X has failed. DIMM in slot X is an unsupported type, and no valid memory exists in another bank.


System LED and Color	Internal Health LED Color	Status
	Amber	<ul style="list-style-type: none"> DIMM in slot X has reached single-bit correctable error threshold. DIMM in slot X is in a pre-failure condition. DIMM in slot X is an unsupported type, but valid memory exists in another bank.
DIMM failure, all slots in one bank (Amber)	Red	No valid or usable memory is installed in the system.
Overtemperature (Amber)	Amber	The Health Driver has detected a cautionary temperature level.
	Red	The server has detected a hardware critical temperature level.
Riser interlock (Amber)	Red	The PCI riser board assembly is not seated.
Fan module (Amber)	Amber	A redundant fan has failed.
Fan module (Red)	Red	The minimum fan requirements are not being met in one or more of the fan modules. One or more fans have failed or are missing.
Power supply signal interlock (Amber)	Red	The power supply signal cable is not connected to the system board.

Internal USB connector

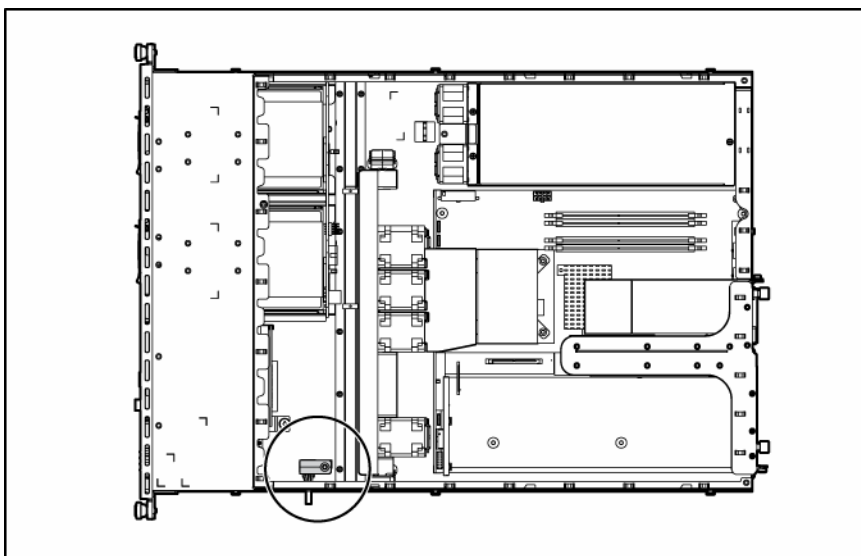


For more information, refer to "Internal USB functionality (on page [50](#))."

SATA and SAS device numbers

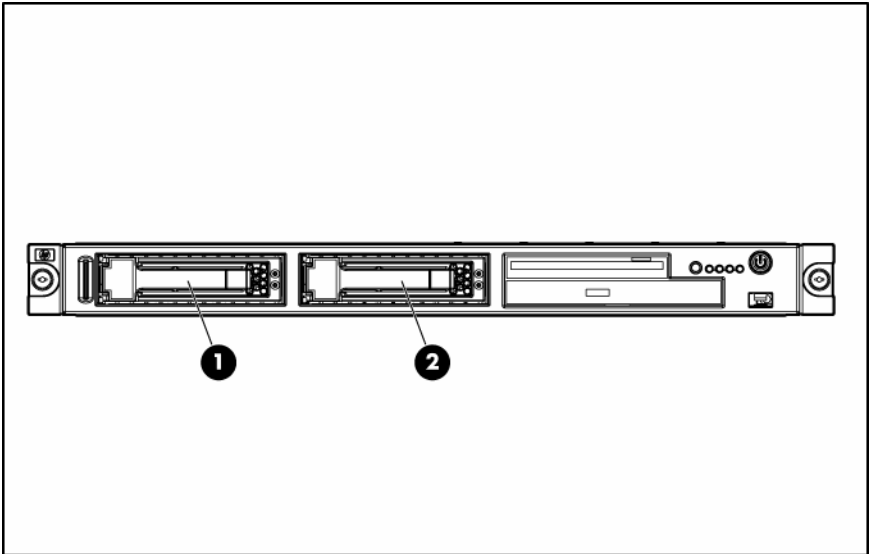

Item	Description
1	Device 1
2	Device 2

Fan assembly location

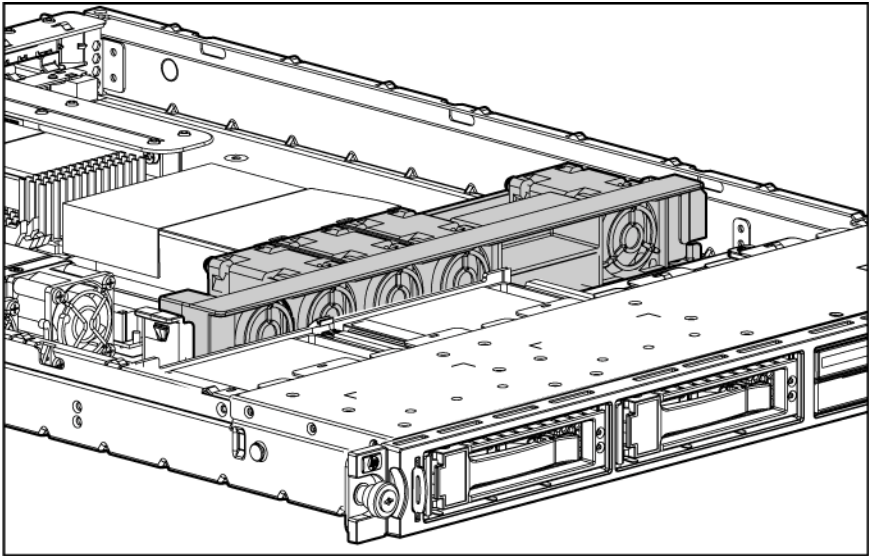

Server operations


In this section

Powering up the server	15
Powering down the server	15
Preparation procedures	16
Extending the server from the rack	16
Removing the server from the rack	16
Removing the access panel	17
Installing the access panel	17
Removing the PCI riser board assembly	17
Installing the PCI riser board assembly	18
Removing the fan assembly	18
Installing the fan assembly	20

Powering up the server

To power up the server, press the Power On/Standby button.

Powering down the server


 **WARNING:** To reduce the risk of personal injury, electric shock, or damage to the equipment, remove the power cord to remove power from the server. The front panel Power On/Standby button does not completely shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

 **IMPORTANT:** If installing a hot-plug device, it is not necessary to power down the server.

1. Back up the server data.
2. Shut down the operating system as directed by the operating system documentation.

 **NOTE:** If the operating system automatically places the server in Standby mode, omit the next step.

3. Press the Power On/Standby button to place the server in standby mode. When the server activates standby power mode, the system power LED changes to amber.

 **IMPORTANT:** Pressing the UID button illuminates the blue UID LEDs on the front or rear panels. In a rack environment, this feature facilitates locating a server when moving between the front and rear of the rack.

4. Disconnect the power cords.

The system is now without power.

Preparation procedures

To access some components and perform certain service procedures, you must perform one or more of the following procedures:

- Extend the server from the rack, if applicable ("Extending the server from the rack" on page 16).
If you are performing service procedures in an HP, Compaq branded, telco, or third-party rack cabinet, you can use the locking feature of the rack rails to support the server and gain access to internal components.
For more information about telco rack solutions, refer to the RackSolutions.com website (<http://www.racksolutions.com/hp>).
If you must remove a server from a rack or a non-hot-plug component from a server, power down the server.
- Remove the server from the rack ("Removing the server from the rack" on page 16).
If the rack environment, cabling configuration, or the server location in the rack creates awkward conditions, remove the server from the rack.
- Remove the access panel ("Removing the access panel" on page 17).

Extending the server from the rack



NOTE: If the optional cable management arm option is installed, you can extend the server without powering down the server or disconnecting peripheral cables and power cords. These steps are only necessary with the standard cable management solution.

1. Power down the server ("Powering down the server" on page 15).
2. Disconnect all peripheral cables and power cords from the server rear panel.
3. Loosen the thumbscrews that secure the server faceplate to the front of the rack.
4. Extend the server on the rack rails until the server rail-release latches engage.



WARNING: To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before extending a component from the rack.



WARNING: To reduce the risk of personal injury, be careful when pressing the server rail-release latches and sliding the server into the rack. The sliding rails could pinch your fingers.

5. After performing the installation or maintenance procedure:
 - a. Slide the server fully into the rack.
 - b. Secure the server by tightening the thumbscrews.
6. Reconnect all peripheral cables and power cords.

Removing the server from the rack


To remove the server from an HP, Compaq branded, telco, or third-party rack:

1. Power down the server ("Powering down the server" on page 15).
2. Disconnect all peripheral cables and power cords from the server rear panel.
3. Disconnect the cable management arm, if necessary. For more information, refer to the documentation that ships with the cable management arm.


4. Loosen the thumbscrews that secure the server faceplate to the front of the rack.
5. Extend the server from the rack ("[Extending the server from the rack](#)" on page 16).
6. Disengage the server from the rack. For more information, refer to the documentation that ships with the rack mounting option.
7. Place the server on a sturdy, level surface.

Removing the access panel

 **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

 **CAUTION:** Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.

1. Power down the server if the standard cable management solution is installed ("[Powering down the server](#)" on page 15).


 **NOTE:** If the optional cable management arm is installed, you can extend the server and perform hot-plug installation or maintenance procedures without powering down the server.

2. Extend the server from the rack, if applicable ("[Extending the server from the rack](#)" on page 16).
3. Use a screwdriver to remove the captive screw.
4. Slide the access panel back and lift it off the server.

Installing the access panel


1. Place the access panel on top of the server, allowing it to extend past the rear of the server approximately 10 mm (0.39 in).
2. Slide the access panel forward to lock, and tighten the captive screw to secure the access panel to the server.

Removing the PCI riser board assembly

 **CAUTION:** To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser board assembly.

1. Power down the server ("[Powering down the server](#)" on page 15).
2. Remove the server from the rack ("[Removing the server from the rack](#)" on page 16).
3. Remove the access panel ("[Removing the access panel](#)" on page 17).
4. Disconnect any internal or external cables connected to any existing expansion boards.


5. Remove the PCI riser board assembly.

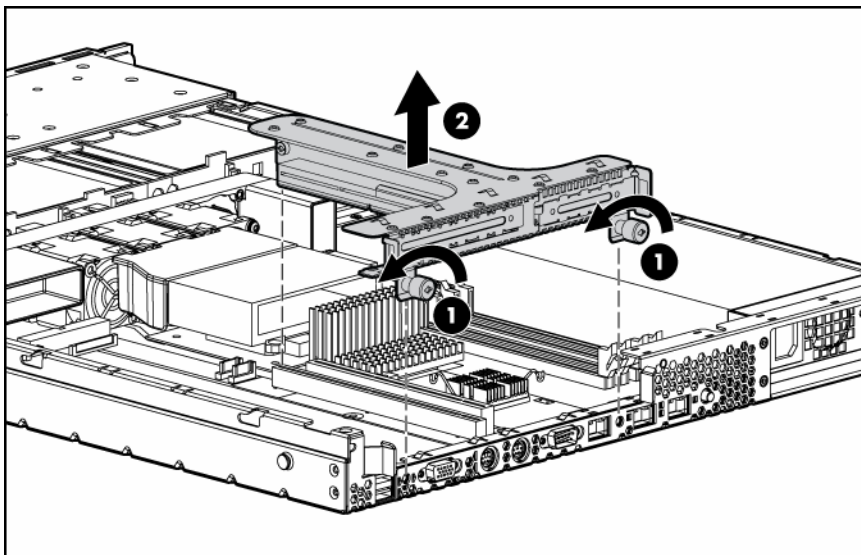

Installing the PCI riser board assembly

⚠ CAUTION: To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser board assembly.

1. Install the PCI riser board assembly.

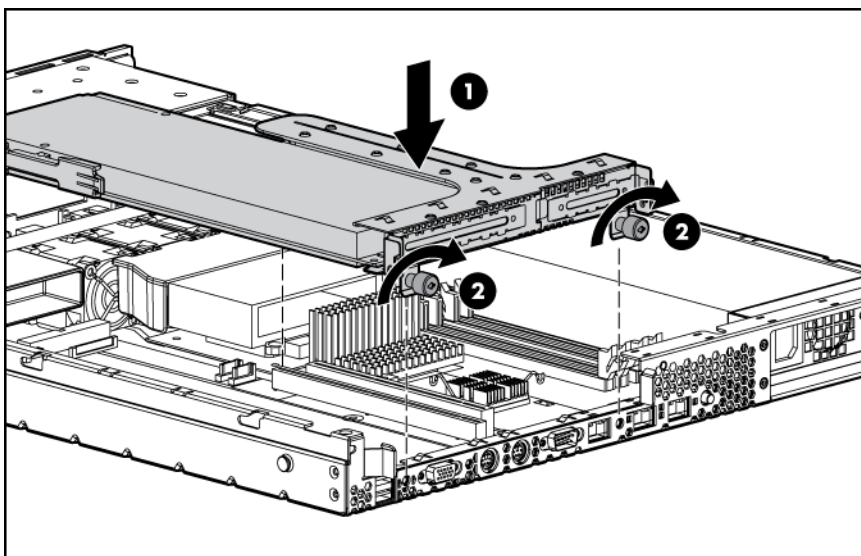


2. Install the access panel ("[Installing the access panel](#)" on page 17).
3. Install the server into the rack ("[Installing the server into the rack](#)" on page 25).


Removing the fan assembly

1. Power down the server ("[Powering down the server](#)" on page 15).
2. Remove the server from the rack ("[Removing the server from the rack](#)" on page 16).
3. Remove the access panel ("[Removing the access panel](#)" on page 17).

4. Remove the air baffle.

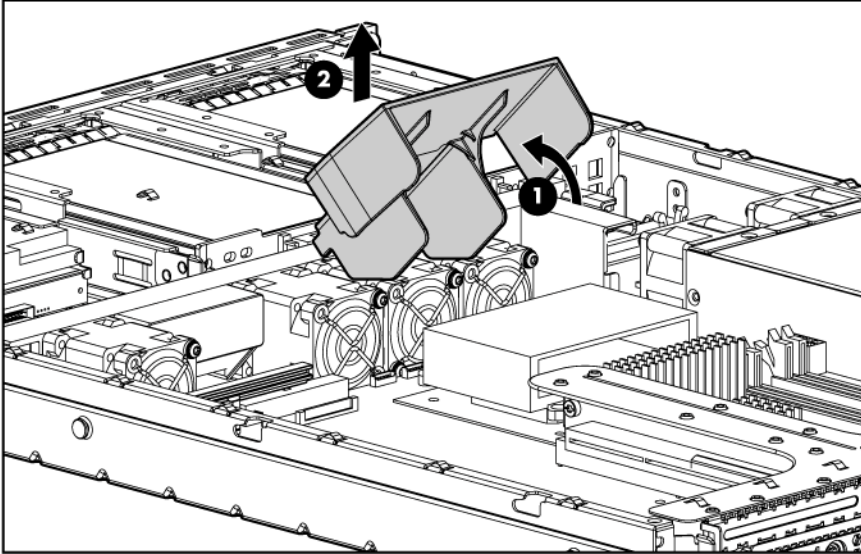


5. Disconnect the fan cables from the system board.
6. Remove the fan assembly.

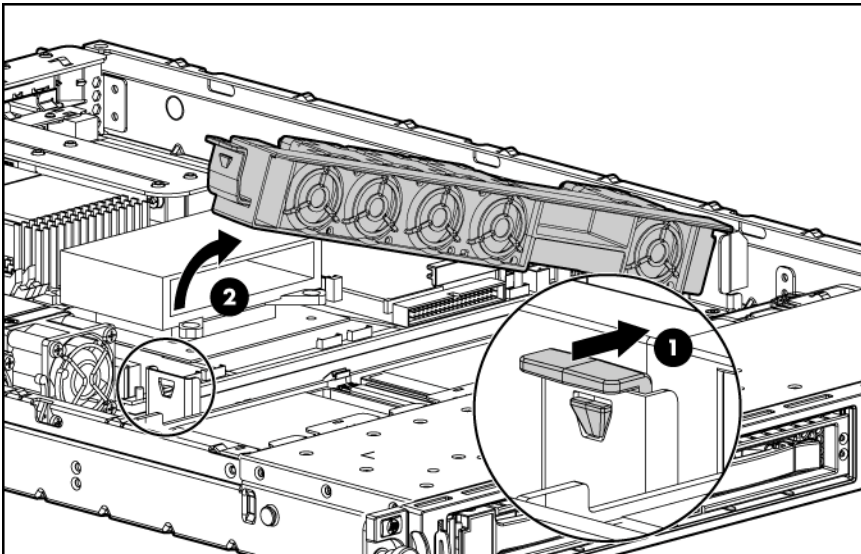


Installing the fan assembly

1. Install the fan assembly.

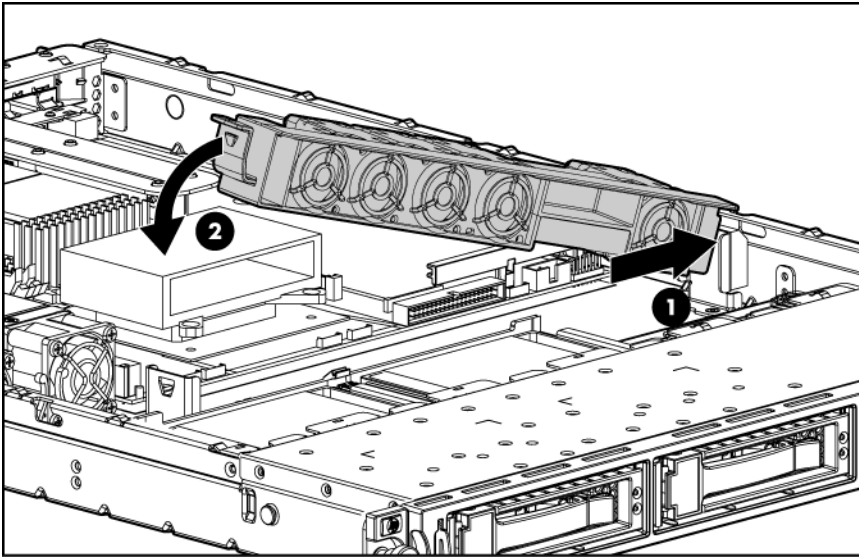

2. Connect the fan cables to the system board.
3. Install the air baffle.

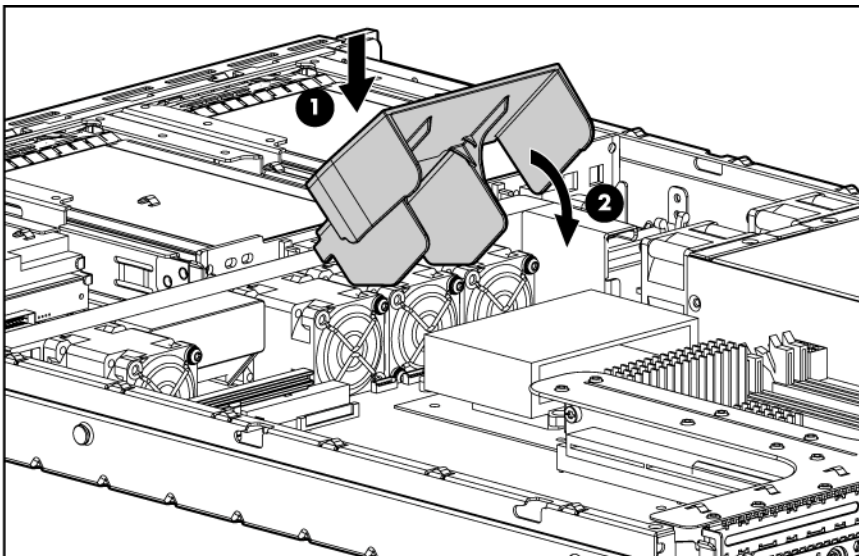

4. Install the access panel ("Installing the access panel" on page 17).
5. Install the server into the rack ("Installing the server into the rack" on page 25).

Server setup

In this section

Optional installation services	21
Rack planning resources	21
Optimum environment.....	22
Rack warnings	24
Identifying the server shipping carton contents	24
Installing hardware options	24
Installing the server into the rack	25
Powering up and configuring.....	25
Installing the operating system	26
Registering the server.....	26

Optional installation services

Delivered by experienced, certified engineers, HP Care Pack services help you keep your servers up and running with support packages tailored specifically for HP ProLiant systems. HP Care Packs let you integrate both hardware and software support into a single package. A number of service level options are available to meet your needs.

HP Care Pack Services offer upgraded service levels to expand your standard product warranty with easy-to-buy, easy-to-use support packages that help you make the most of your server investments. Some of the Care Pack services are:

- Hardware support
 - 6-Hour Call-to-Repair
 - 4-Hour 24x7 Same Day
 - 4-Hour Same Business Day
- Software support
 - Microsoft®
 - Linux
 - HP ProLiant Essentials (HP SIM and RDP)
- Startup and implementation services for both hardware and software

For more information on Care Packs, refer to the HP website (http://www.hp.com/hps/carepack/servers/cp_proliant.html).

Rack planning resources

The rack resource kit ships with all HP branded or Compaq branded 9000, 10000, and H9 series racks. A summary of the content of each resource follows:

- Custom Builder is a web-based service for configuring one or many racks. Rack configurations can be created using:

- A simple, guided interface
- Build-it-yourself mode

For more information, refer to the HP website (<http://www.hp.com/products/configurator>).

- The Installing Rack Products video provides a visual overview of operations required for configuring a rack with rack-mountable components. It also provides the following important configuration steps:
 - Planning the site
 - Installing rack servers and rack options
 - Cabling servers in a rack
 - Coupling multiple racks
- The Rack Products Documentation CD enables you to view, search, and print documentation for HP and Compaq branded racks and rack options. It also helps you set up and optimize a rack in a manner that best fits your environment.

If you intend to deploy and configure multiple servers in a single rack, refer to the white paper on high-density deployment on the HP website (<http://www.hp.com/products/servers/platforms>).

Optimum environment

When installing the server in a rack, select a location that meets the environmental standards described in this section.

Space and airflow requirements

To allow for servicing and adequate airflow, observe the following space and airflow requirements when deciding where to install a rack:

- Leave a minimum clearance of 122 cm (48 in) in front of the rack.
- Leave a minimum clearance of 76.2 cm (30 in) behind the rack.
- Leave a minimum clearance of 122 cm (48 in) from the back of the rack to the back of another rack when racks are back-to-back.

HP servers draw in cool air through the front door and expel warm air through the rear door. Therefore, the front and rear rack doors must be adequately ventilated to allow ambient room air to enter the cabinet, and the rear door must be adequately ventilated to allow the warm air to escape from the cabinet.

⚠ CAUTION: To prevent improper cooling and damage to the equipment, do not block the ventilation openings.

When vertical space in the rack is not filled by a server or rack component, the gaps between the components cause changes in airflow through the rack and across the servers. Cover all gaps with blanking panels to maintain proper airflow.

⚠ CAUTION: Always use blanking panels to fill empty vertical spaces in the rack. This arrangement ensures proper airflow. Using a rack without blanking panels results in improper cooling that can lead to thermal damage.

The Compaq 9000 and 10000 Series racks provide proper server cooling from flow-through perforations in the front and rear doors that provide 64 percent open area for ventilation.

⚠ CAUTION: When using a Compaq branded 7000 Series rack, you must install the high airflow rack door insert [P/N 327281-B21 (42U) or P/N 157847-B21 (22U)] to provide proper front-to-back airflow and cooling.

- ⚠ CAUTION:** If a third-party rack is used, observe the following additional requirements to ensure adequate airflow and to prevent damage to the equipment:
- Front and rear doors—If the 42U rack includes closing front and rear doors, you must allow 5,350 sq cm (830 sq in) of holes evenly distributed from top to bottom to permit adequate airflow (equivalent to the required 64 percent open area for ventilation).
 - Side—The clearance between the installed rack component and the side panels of the rack must be a minimum of 7 cm (2.75 in).

Temperature requirements

To ensure continued safe and reliable equipment operation, install or position the system in a well-ventilated, climate-controlled environment.

The maximum recommended ambient operating temperature (TMRA) for most server products is 35°C (95°F). The temperature in the room where the rack is located must not exceed 35°C (95°F).

- ⚠ CAUTION:** To reduce the risk of damage to the equipment when installing third-party options:
- Do not permit optional equipment to impede airflow around the server or to increase the internal rack temperature beyond the maximum allowable limits.
 - Do not exceed the manufacturer's TMRA.

Power requirements

Installation of this equipment must comply with local and regional electrical regulations governing the installation of information technology equipment by licensed electricians. This equipment is designed to operate in installations covered by NFPA 70, 1999 Edition (National Electric Code) and NFPA-75, 1992 (code for Protection of Electronic Computer/Data Processing Equipment). For electrical power ratings on options, refer to the product rating label or the user documentation supplied with that option.

- ⚠ WARNING:** To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority having jurisdiction over wiring and installation requirements of your facility.

- ⚠ CAUTION:** Protect the server from power fluctuations and temporary interruptions with a regulating uninterruptible power supply (UPS). This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system in operation during a power failure.

When installing more than one server, you may need to use additional power distribution devices to safely provide power to all devices. Observe the following guidelines:

- Balance the server power load between available AC supply branch circuits.
- Do not allow the overall system AC current load to exceed 80 percent of the branch circuit AC current rating.
- Do not use common power outlet strips for this equipment.
- Provide a separate electrical circuit for the server.

Electrical grounding requirements

The server must be grounded properly for proper operation and safety. In the United States, you must install the equipment in accordance with NFPA 70, 1999 Edition (National Electric Code), Article 250, as well as any local and regional building codes. In Canada, you must install the equipment in accordance with Canadian Standards Association, CSA C22.1, Canadian Electrical Code. In all other countries, you must install the equipment in accordance with any regional or national electrical wiring codes, such as the International Electrotechnical Commission (IEC) Code 364, parts 1 through 7.

Furthermore, you must be sure that all power distribution devices used in the installation, such as branch wiring and receptacles, are listed or certified grounding-type devices.

Because of the high ground-leakage currents associated with multiple servers connected to the same power source, HP recommends the use of a PDU that is either permanently wired to the building's branch circuit or includes a nondetachable cord that is wired to an industrial-style plug. NEMA locking-style plugs or those complying with IEC 60309 are considered suitable for this purpose. Using common power outlet strips for the server is not recommended.

Rack warnings

- ⚠ WARNING: To reduce the risk of personal injury or damage to the equipment, be sure that:**
- **The leveling jacks are extended to the floor.**
 - **The full weight of the rack rests on the leveling jacks.**
 - **The stabilizing feet are attached to the rack if it is a single-rack installation.**
 - **The racks are coupled together in multiple-rack installations.**
 - **Only one component is extended at a time. A rack may become unstable if more than one component is extended for any reason.**
- ⚠ WARNING: To reduce the risk of personal injury or equipment damage when unloading a rack:**
- **At least two people are needed to safely unload the rack from the pallet. An empty 42U rack can weigh as much as 115 kg (253 lb), can stand more than 2.1 m (7 ft) tall, and may become unstable when being moved on its casters.**
 - **Never stand in front of the rack when it is rolling down the ramp from the pallet. Always handle the rack from both sides.**

Identifying the server shipping carton contents

Unpack the server shipping carton and locate the materials and documentation necessary for installing the server. All the rack mounting hardware necessary for installing the server into the rack is included with the rack or the server.

The contents of the server shipping carton include:

- Server
- Printed setup documentation, Documentation CD, and software products
- Power cord
- Rack mounting hardware kit and documentation

In addition to these supplied items, you may need:

- Application software CDs or diskettes
- Options to be installed
- Phillips screwdriver

Installing hardware options

Install any hardware options before initializing the server. For options installation information, refer to the option documentation. For server-specific information, refer to "Hardware options installation (on page [27](#))."


Installing the server into the rack

To install the server into a rack with square, round, or threaded holes, refer to the instructions that ship with the rack hardware kit.

If you are installing the server into a telco rack, order the appropriate option kit at the RackSolutions.com website (<http://www.racksolutions.com/hp>). Follow the server-specific instructions on the website to install the rack brackets.

Use the following information when connecting peripheral cables and power cords to the server.

⚠ WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into RJ-45 connectors.

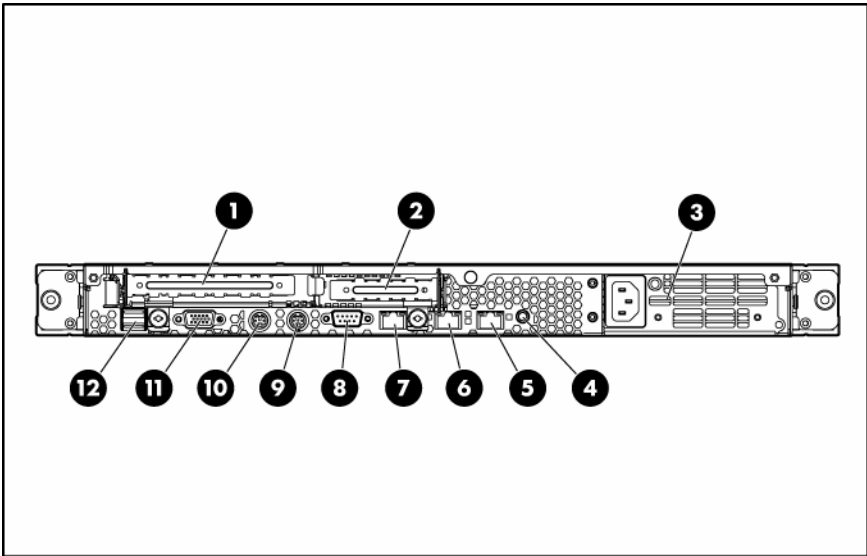

Item	Description
1	PCI-X expansion slot 2, full-length (optional PCI Express slot 1)
2	PCI Express expansion slot 1, low-profile, half-length
3	Power supply
4	UID button/LED
5	10/100/1000 NIC 2
6	10/100/1000 NIC 1
7	iLO 2 management port
8	Serial connector
9	Keyboard connector
10	Mouse connector
11	Video connector
12	USB connectors (2)

Powering up and configuring

📌 IMPORTANT: The **F8** key is available only when a supported storage controller is installed in the server.

To power up the server, press the Power On/Standby button.

While the server boots, RBSU and the ORCA utility are automatically configured to prepare the server for OS installation.

- Press the **F8** key when prompted during the array controller initialization to configure the array controller using ORCA. The array controller defaults to RAID 0 with one drive installed and RAID 1 with more than one drive installed.
- Press the **F9** key, when prompted during the boot process, to access RBSU and change the server settings (such as language and operating system). The system is set up by default for the English language.

For more information on the automatic configuration, refer to the *HP ROM-Based Setup Utility User Guide* located on the Documentation CD.

Installing the operating system

To operate properly, the server must have a supported OS. For the latest information on OS support, refer to the HP website (<http://www.hp.com/go/supportos>).

Two methods are available to install an OS on the server:

- SmartStart assisted installation—Insert the SmartStart CD into the CD-ROM drive and reboot the server.
- Manual installation—Insert the OS CD into the CD-ROM drive and reboot the server. This process may require you to obtain additional drivers from the HP website (<http://www.hp.com/support>).

Follow the on-screen instructions to begin the installation process.



NOTE: For SATA RAID configuration, a driver diskette must be created.

For information on using these installation paths, refer to the SmartStart installation poster in the HP ProLiant Essentials Foundation Pack, included with the server.

Registering the server

To register a server, refer to the registration card in the HP ProLiant Essentials Foundation Pack or the HP Registration website (<http://register.hp.com>).

Hardware options installation


In this section

Introduction	27
Memory options	27
Hard drive options	28
Optical drive assembly option	31
Diskette drive assembly option	35
Expansion board	39
Storage controller option	40
Installing PCI Express riser boards	41

Introduction

If more than one option is being installed, read the installation instructions for all the hardware options and identify similar steps to streamline the installation process.

 **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

 **CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

Memory options

You can expand server memory by installing PC4200 DDR2 unbuffered SDRAM DIMMs. The system supports up to four ECC DDR2 SDRAM DIMMs.

 **NOTE:** By default, the server is set to **Advanced ECC Support**. Refer to "HP ROM-Based Setup Utility (on page 46)" for more information.

The server supports standard memory configuration for maximum performance with up to 8 GB of active memory (four 2-GB memory modules).

Interleaving and non-interleaving memory configuration

The server supports interleaving and non-interleaving memory configurations. Interleaving memory increases bandwidth by enabling simultaneous access to multiple blocks of data. For example, to overlap read-writes, the server divides the system memory between pairs of DIMMs, and then writes to and reads from each DIMM concurrently. For an interleaving configuration, always install identical DIMMs in pairs. For a non-interleaving configuration, install a single DIMM in slot 1 only.

DIMM installation guidelines

Observe the following guidelines when installing additional memory:

- DIMMs installed in the server must be unbuffered DDR2 SDRAM, 2.5 V, 64 bits wide, and ECC.

- All DIMMs installed must be the same speed (DDR2 PC4200). Do not install DIMMs supporting different speeds.
- If only a single DIMM is installed, HP recommends installing it in slot 1A.

BIOS detects the DIMM population and sets the system as follows:


- Single-bank mode: DIMMs installed in one bank only.
- Dual-bank interleaved mode: DIMMs installed in both banks with equal bank capacities.

The following table lists some, but not all, possible configurations. For best performance, HP recommends dual-bank interleaved mode configurations.

Slot 1A	Slot 2A	Slot 3B	Slot 4B	Total Memory	Mode
512 MB	—	—	—	512 MB	Single-bank
512 MB	—	512 MB	—	1 GB	Dual-bank interleaved
1 GB	—	—	—	1 GB	Single-bank
1 GB	—	1 GB	—	2 GB	Dual-bank interleaved
1 GB	1 GB	1 GB	1 GB	4 GB	Dual-bank interleaved

Installing DIMMs

1. Power down the server ("[Powering down the server](#)" on page 15).
2. Remove the server from the rack ("[Removing the server from the rack](#)" on page 16).
3. Remove the access panel ("[Removing the access panel](#)" on page 17).
4. Open the DIMM slot latches.
5. Install the DIMM.

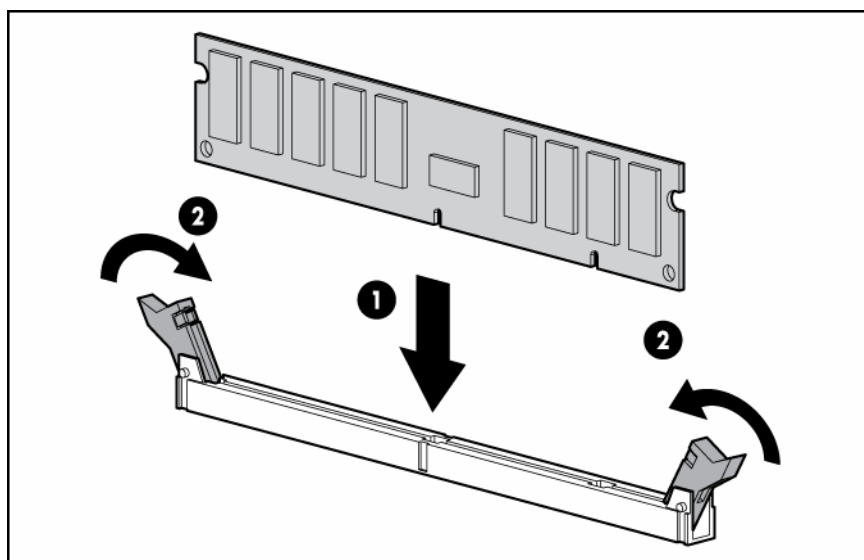

6. Install the access panel ("[Installing the access panel](#)" on page 17).
7. Install the server into the rack ("[Installing the server into the rack](#)" on page 25).

Hard drive options

The server provides non-hot plug capability through an embedded SATA controller. To obtain SAS or SATA hot-plug capability, install an optional controller.

Hard drive guidelines

When adding hard drives to the server, observe the following general guidelines:

- The system automatically sets all drive numbers.
- If only one hard drive is used, install it in the bay with the lowest drive number.
- Drives must be the same capacity to provide the greatest storage space efficiency when drives are grouped together into the same drive array.

Optional storage controllers provide support for hot-plug capability and drive LEDs. Controller options are:

- The embedded controller supports non-hot-plug SATA hard drives. Drive LEDs are not supported.
- Optional SATA controllers support hot-plug SATA hard drives and drive LEDs.
- Optional SAS controllers support hot-plug SAS or SATA hard drives and drive LEDs.




NOTE: ACU does not support mixing SAS and SATA drives in the same logical volume.

Removing a hard drive blank

To remove the component:



CAUTION: To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

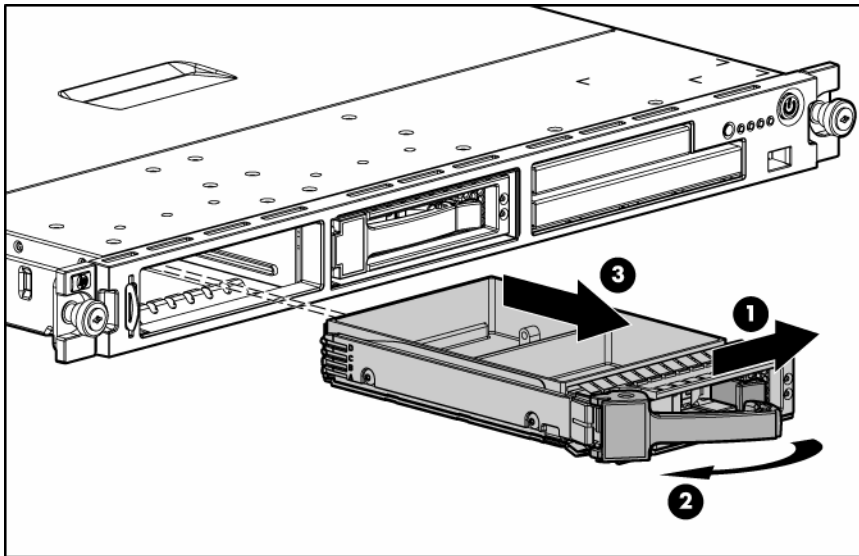


Removing hard drives

To remove the component:

1. Back up all data on the hard drive.
2. Power down the server ("[Powering down the server](#)" on page 15).
3. Remove the hard drive.


CAUTION: To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

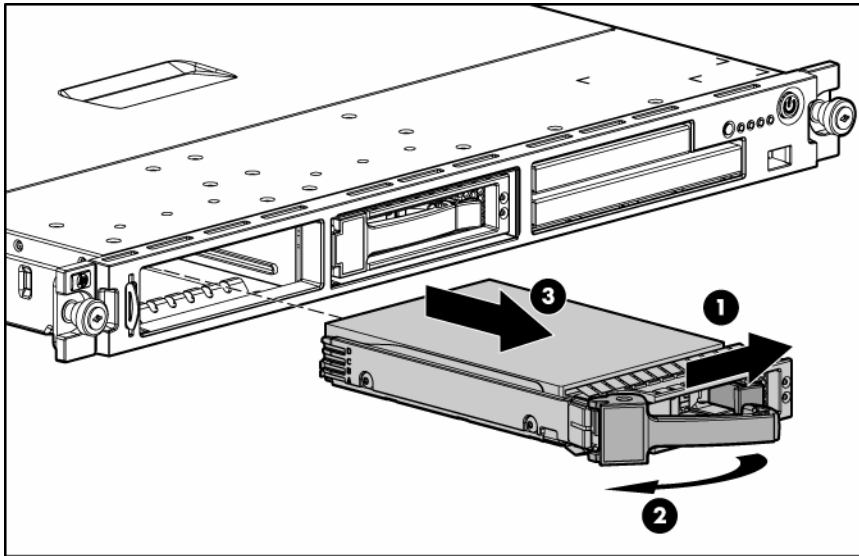


Installing hard drives

IMPORTANT: Hot-plug capability and drive LED support are only available when a supported optional controller is installed in the server.

1. Power down the server ("[Powering down the server](#)" on page 15).
2. Remove the existing hard drive blank or hard drive from the drive bay ("[Removing a hard drive blank](#)" on page 29).
3. Prepare the hard drive.

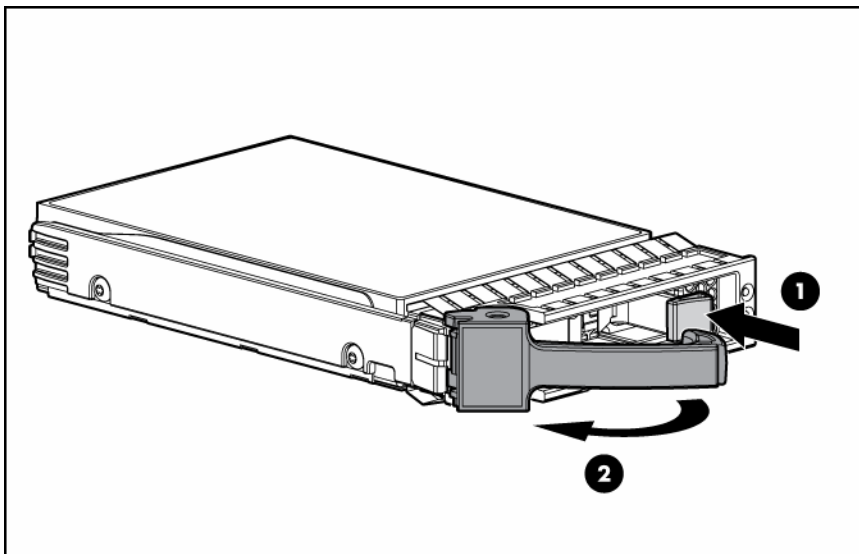

4. Install the hard drive.

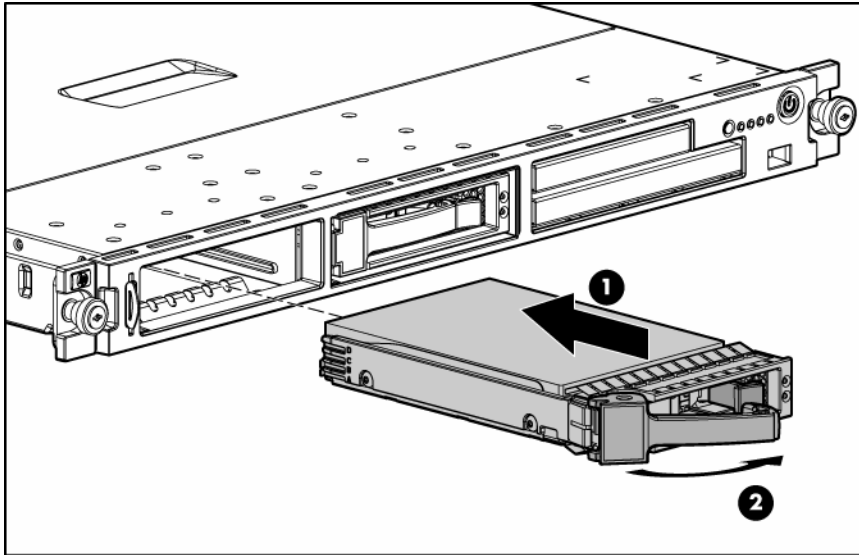


Optical drive assembly option

CAUTION: To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.


NOTE: The server supports slimline optical devices, including CD-ROM, DVD-ROM, and DVD-RW.

1. Power down the server ("[Powering down the server](#)" on page 15).
2. Remove the server from the rack ("[Removing the server from the rack](#)" on page 16).
3. Remove the access panel ("[Removing the access panel](#)" on page 17).
4. Remove the fan assembly ("[Removing the fan assembly](#)" on page 18).
5. Disconnect the front panel LED board cable.

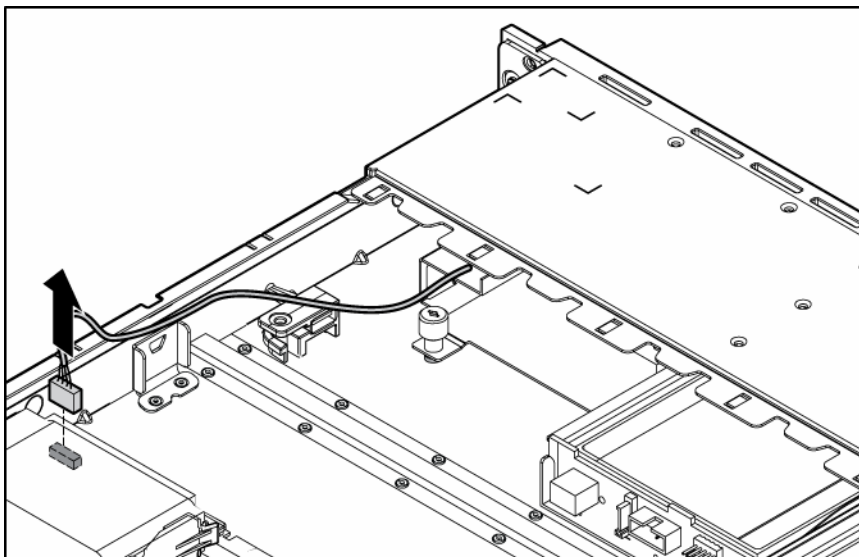


6. Disconnect cables from any devices installed in the media cage, if necessary.

7. Remove the media cage.

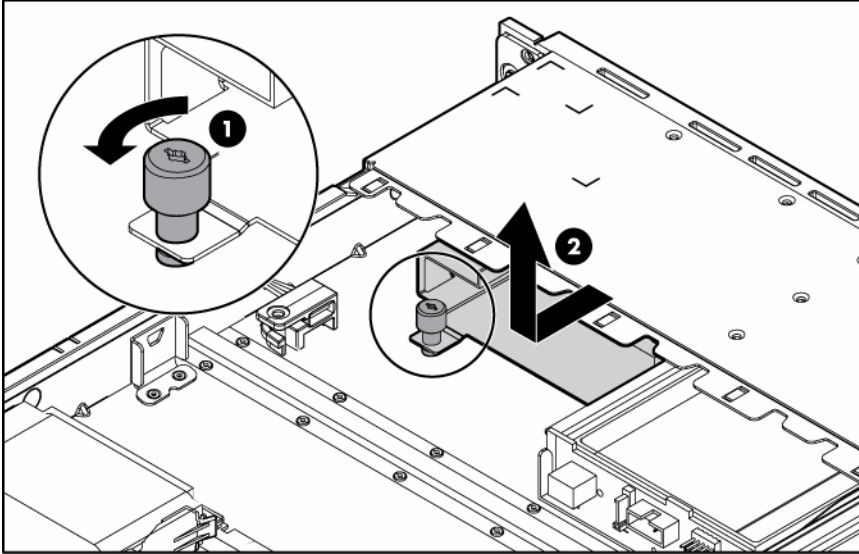


8. Remove the optical drive blank.

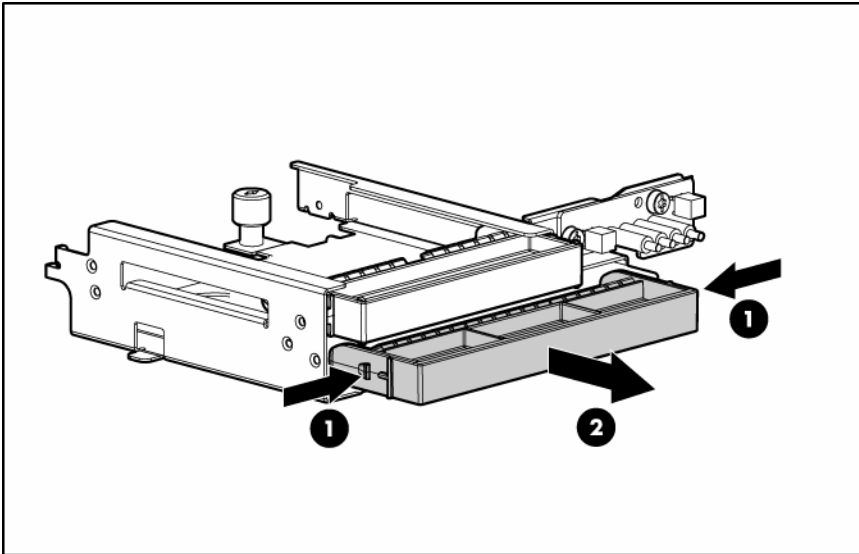


9. Remove the screws required to install the optical drive.




NOTE: Five screws are provided on the media cage, but only four screws are required to install the drive.

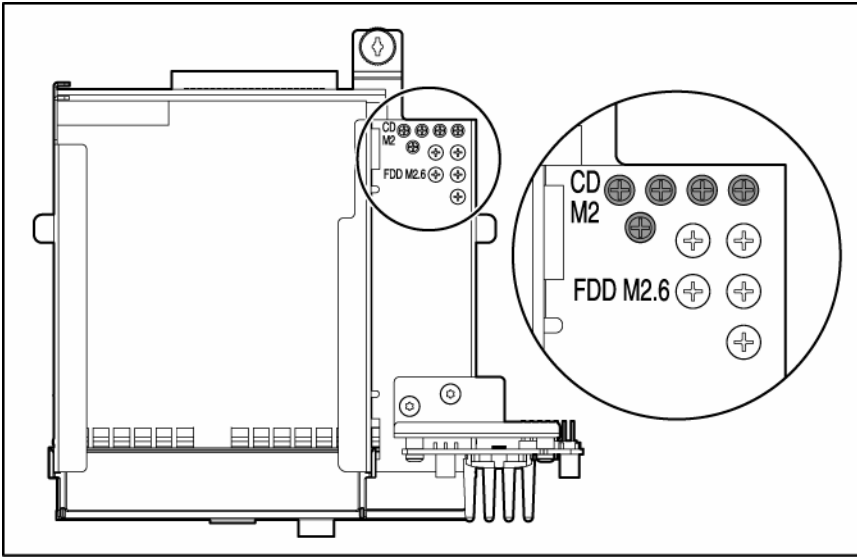


10. Install the optical drive into the media cage.

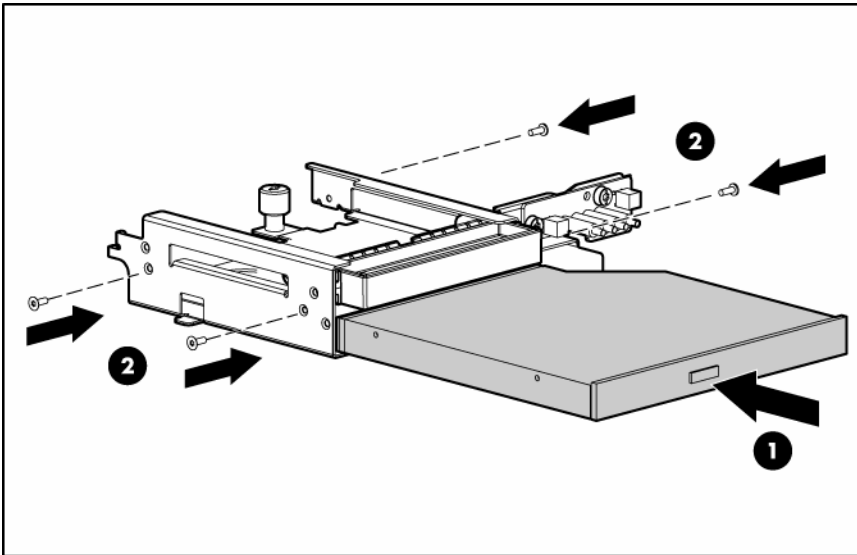

11. Install the media cage.

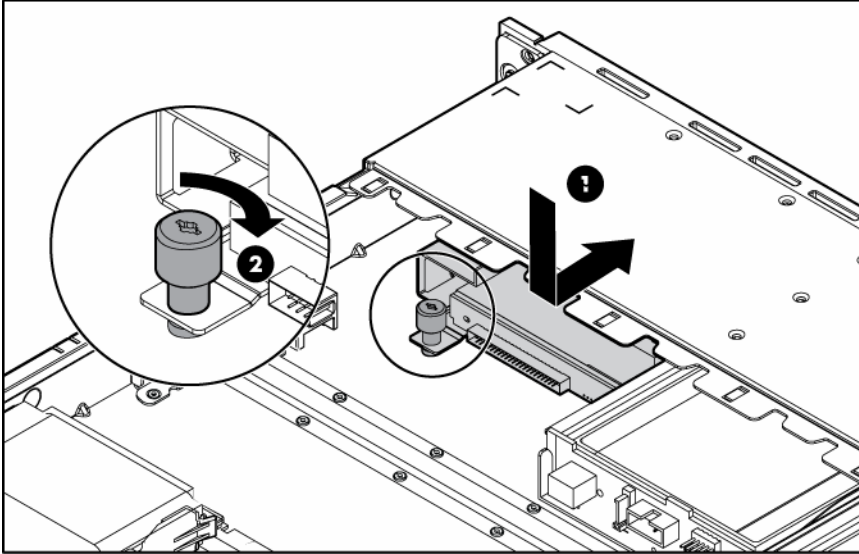


12. Connect the optical drive cable and the optical drive power cable to the optical drive.

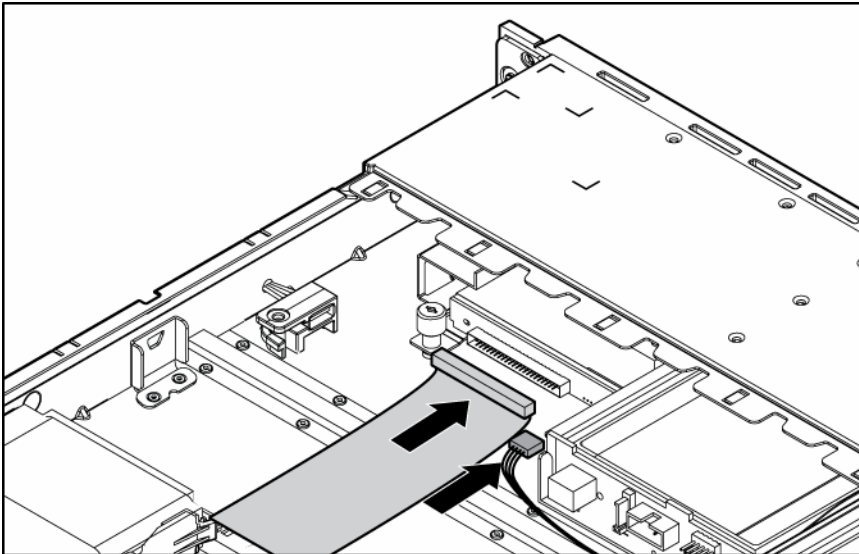

13. Connect all cables to other devices installed in the media cage, if necessary.

14. Connect the front panel LED board cable.

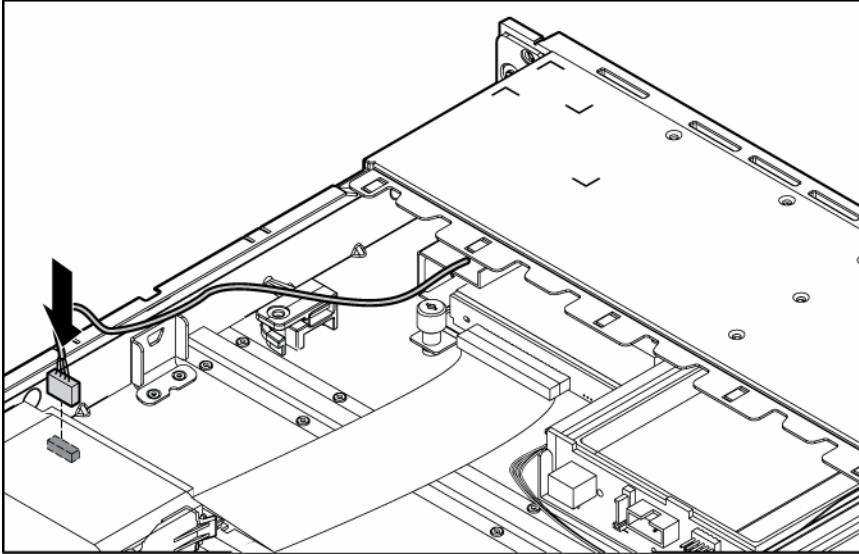


15. Install the fan assembly ("Installing the fan assembly" on page 20).
16. Install the access panel ("Installing the access panel" on page 17).
17. Install the server into the rack ("Installing the server into the rack" on page 25).

Diskette drive assembly option


⚠ CAUTION: To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

1. Power down the server ("Powering down the server" on page 15).
2. Remove the server from the rack ("Removing the server from the rack" on page 16).
3. Remove the access panel ("Removing the access panel" on page 17).
4. Remove the fan assembly ("Removing the fan assembly" on page 18).
5. Disconnect the front panel LED board cable.

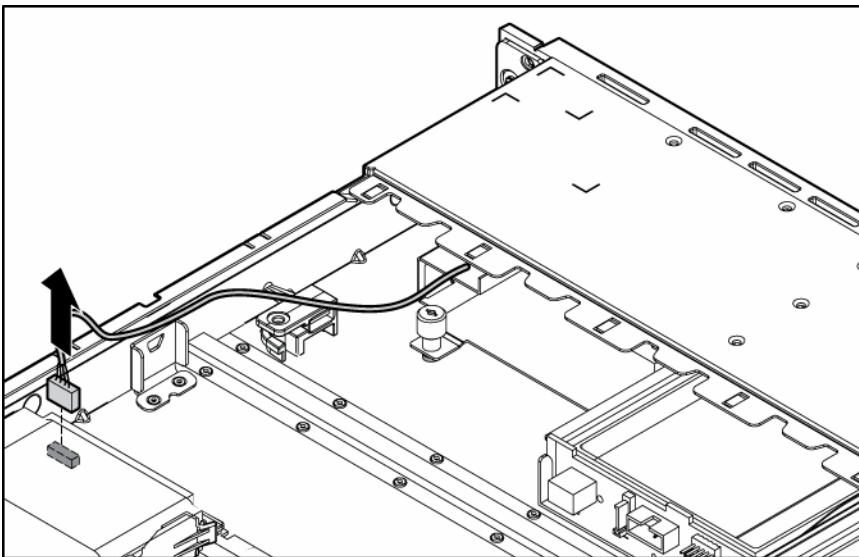


6. Disconnect cables from any devices installed in the media cage, if necessary.

7. Remove the media cage.

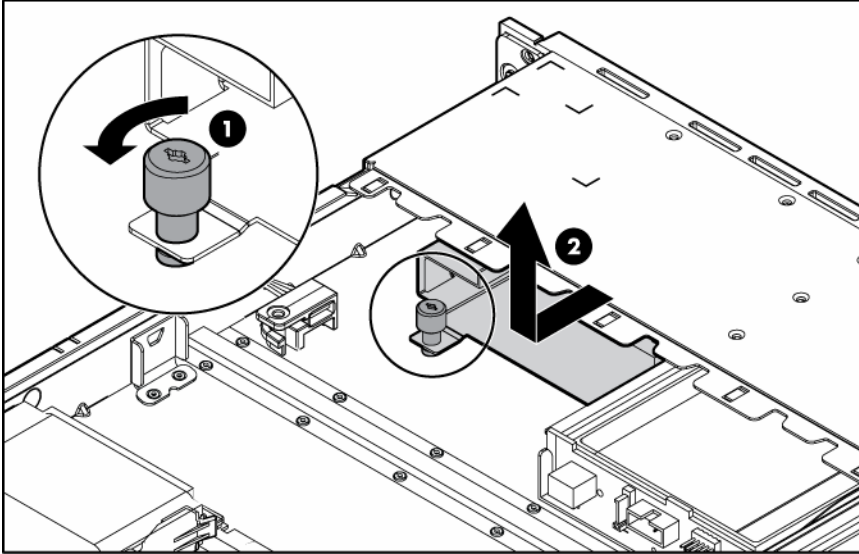


8. Remove the diskette drive blank.

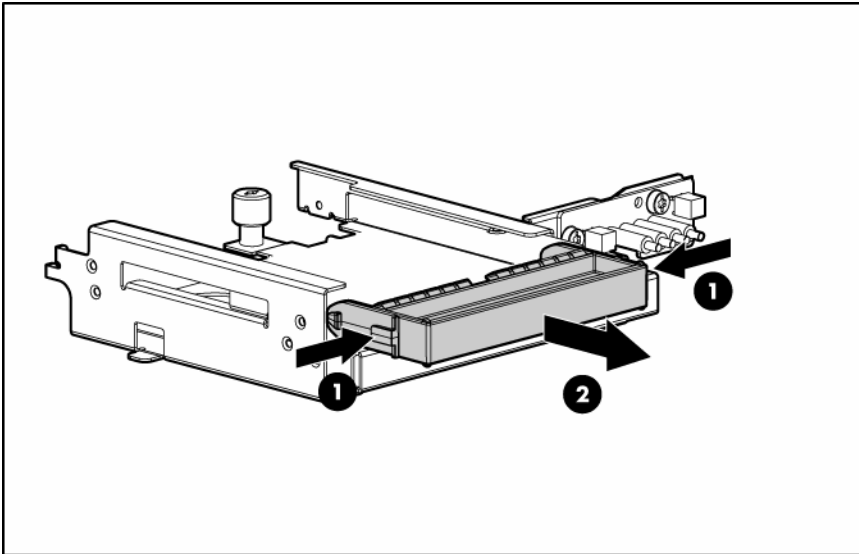


9. Remove the screws required to install the diskette drive.




NOTE: Five screws are provided on the media cage, but only four screws are required to install the drive.

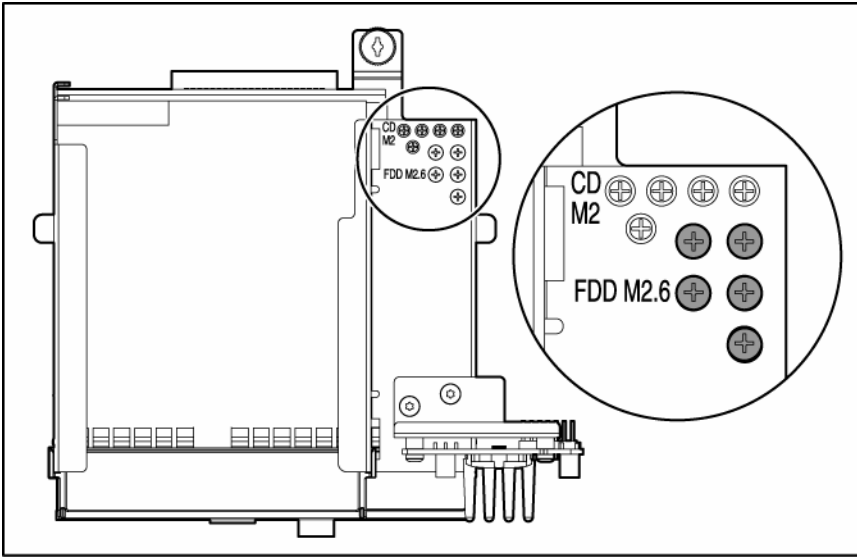


10. Install the diskette drive into the media cage.

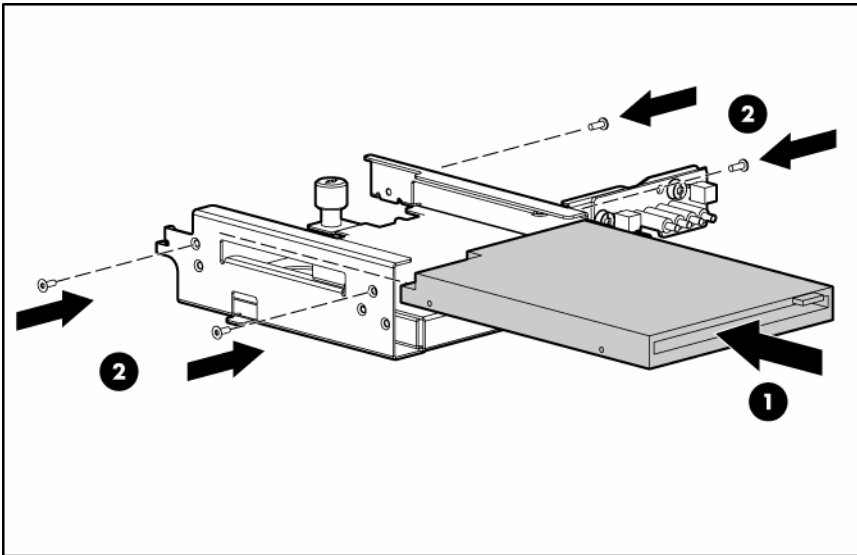

11. Install the media cage.

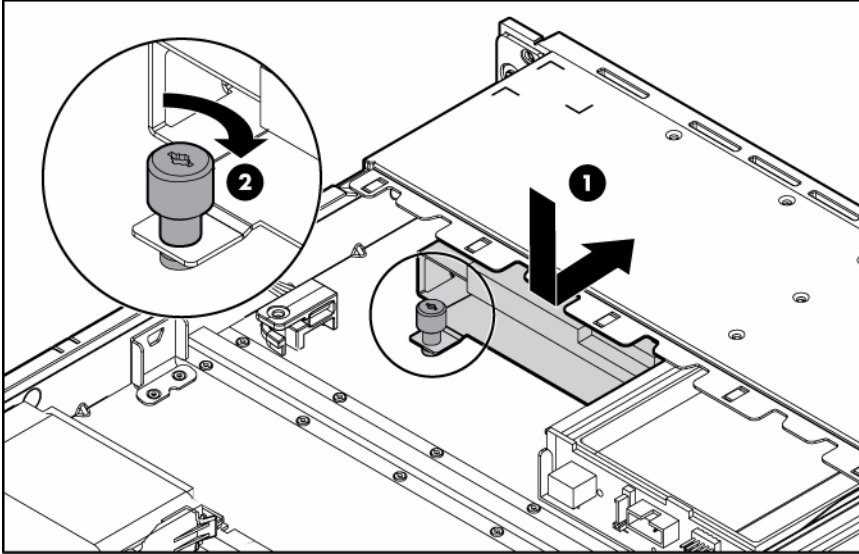


12. Connect the diskette drive cable to the diskette drive.

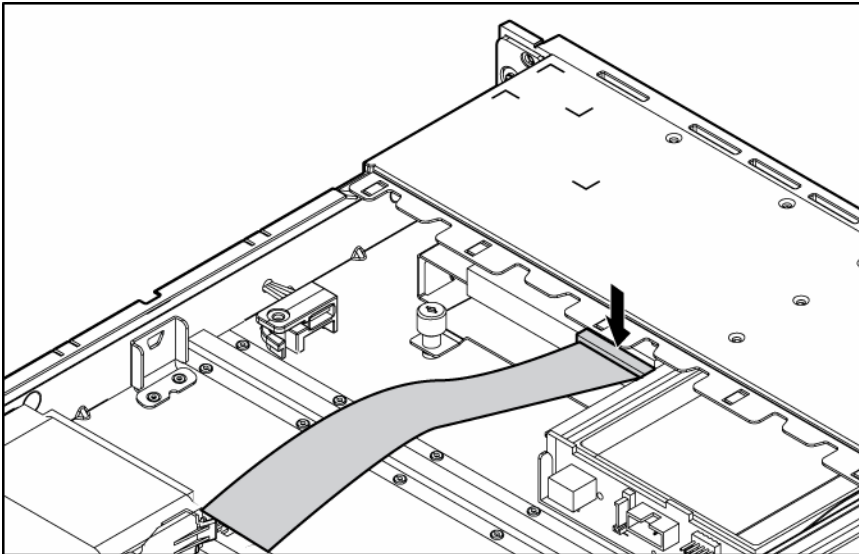

13. Connect all cables to other devices installed in the media cage, if necessary.


14. Connect the front panel LED board cable.

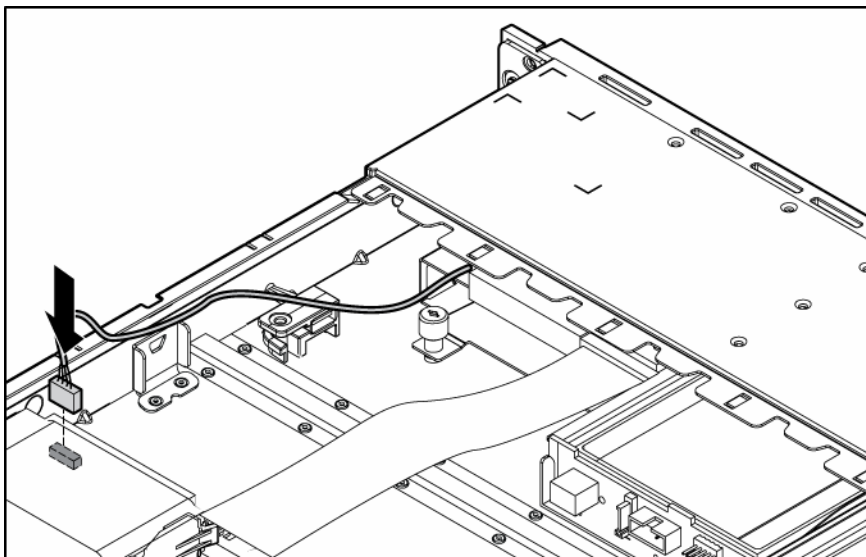


15. Install the fan assembly ("Installing the fan assembly" on page 20).
16. Install the access panel ("Installing the access panel" on page 17).
17. Install the server into the rack ("Installing the server into the rack" on page 25).

Expansion board

1. Power down the server ("Powering down the server" on page 15).
2. Remove the server from the rack ("Removing the server from the rack" on page 16).
3. Remove the access panel ("Removing the access panel" on page 17).
4. Remove the PCI riser board assembly ("Removing the PCI riser board assembly" on page 17).
5. Remove the bezel blank.

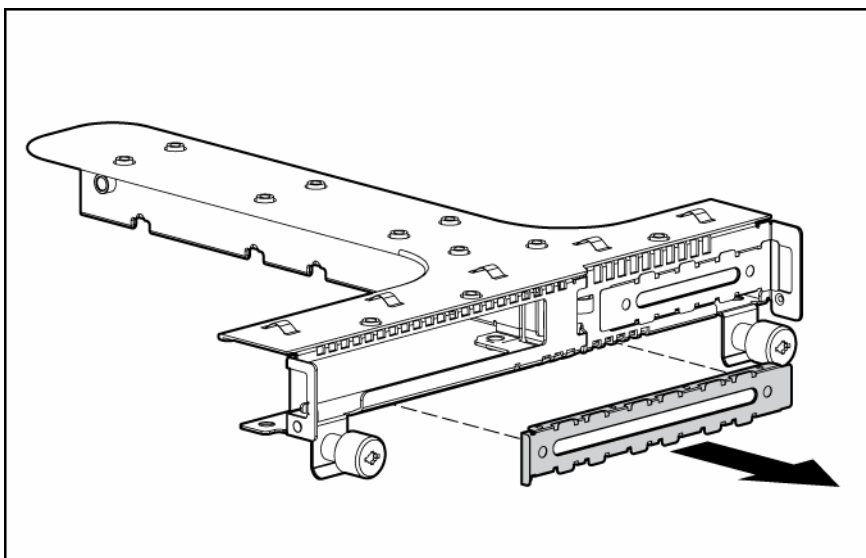

6. Install the expansion board.

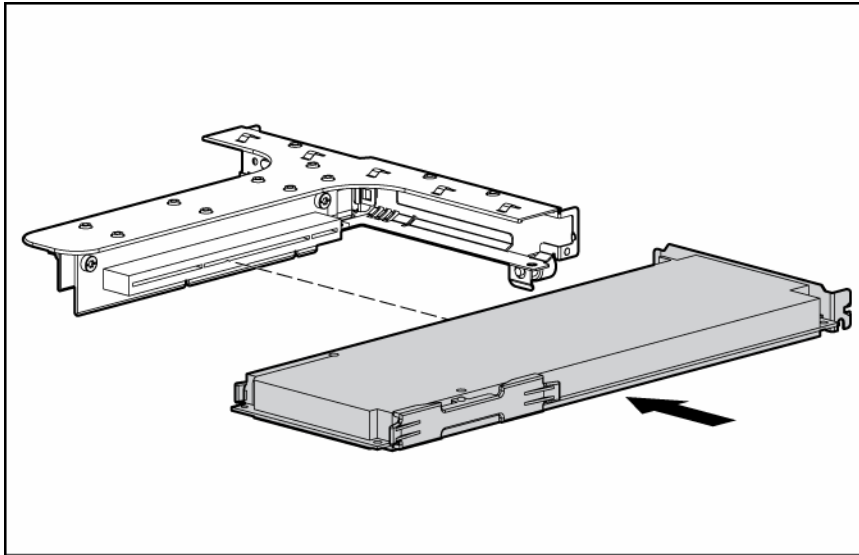

7. Install the PCI riser board assembly ("[Installing the PCI riser board assembly](#)" on page 18).
8. Install the access panel ("[Installing the access panel](#)" on page 17).
9. Install the server into the rack ("[Installing the server into the rack](#)" on page 25).

Storage controller option



IMPORTANT: For additional installation and configuration information, refer to the documentation that ships with the option.


1. Power down the server ("[Powering down the server](#)" on page 15).
2. Remove the server from the rack ("[Removing the server from the rack](#)" on page 16).
3. Remove the access panel ("[Removing the access panel](#)" on page 17).
4. Remove the PCI riser board assembly ("[Removing the PCI riser board assembly](#)" on page 17).
5. Install the storage controller ("[Expansion board](#)" on page 39).
6. Install the PCI riser board assembly ("[Installing the PCI riser board assembly](#)" on page 18).



IMPORTANT: The server will not power up if the PCI riser board assembly is not seated properly.

7. Remove the fan assembly ("[Removing the fan assembly](#)" on page 18).
8. Remove the hard drive cables.


9. Connect the DL320 hot-plug SATA/SAS cable provided in the storage controller option kit to the storage controller and the backplane.

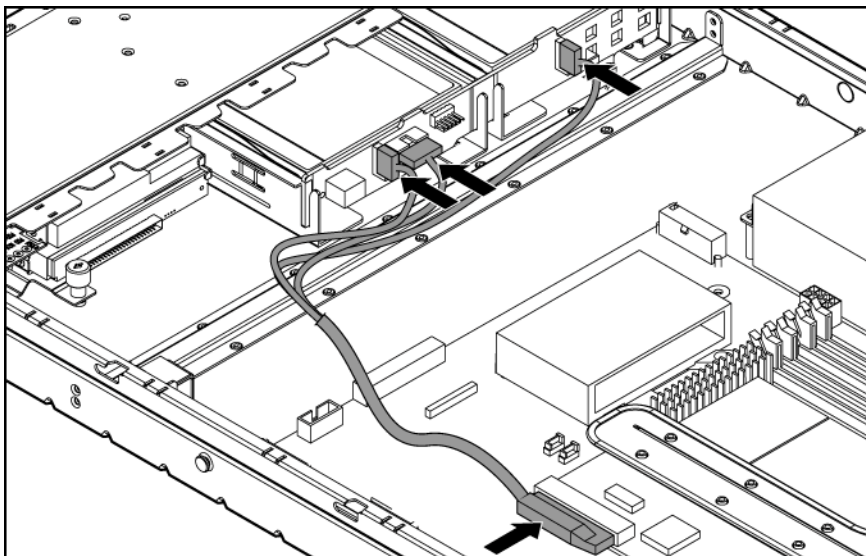

10. Install the fan assembly ("Installing the fan assembly" on page 20).
11. Install the access panel ("Installing the access panel" on page 17).
12. Install the server into the rack ("Installing the server into the rack" on page 25).

Installing PCI Express riser boards


1. Power down the server ("Powering down the server" on page 15).
2. Extend the server from the rack, if applicable ("Extending the server from the rack" on page 16).
3. Remove the access panel ("Removing the access panel" on page 17).
4. Remove the PCI riser board assembly ("Removing the PCI riser board assembly" on page 17).
5. Remove any installed expansion boards.

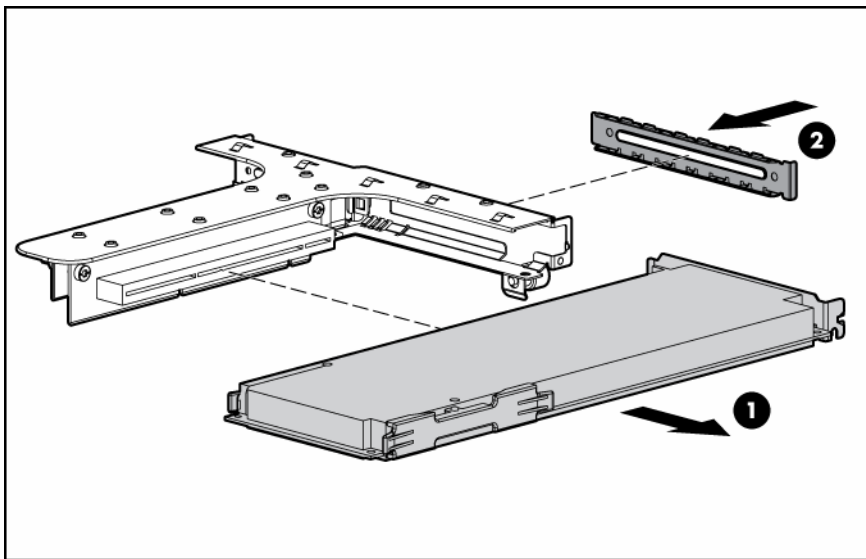


6. Remove the riser board with the slot for full-length expansion boards.



IMPORTANT: When removing the two parts of the riser board, pay attention to the orientation of the slots on each side. This information is important for subsequent procedures.

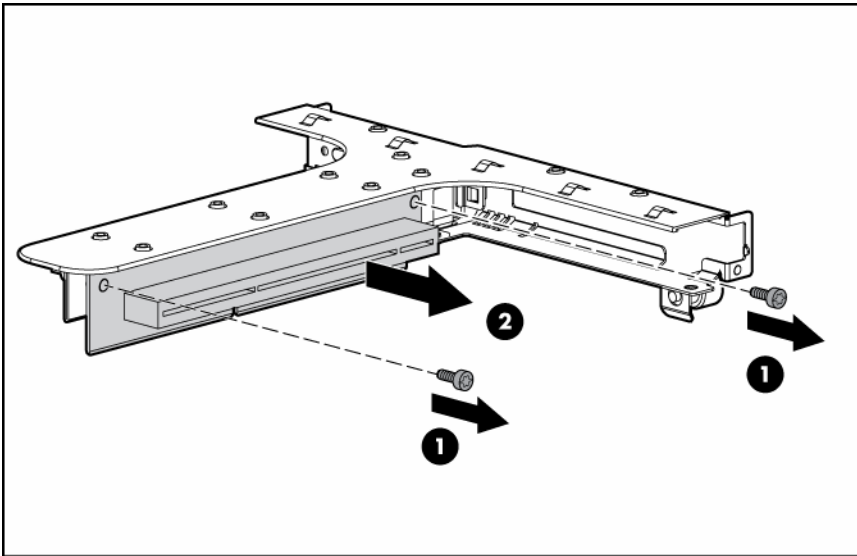

7. Install the PCI Express riser board.

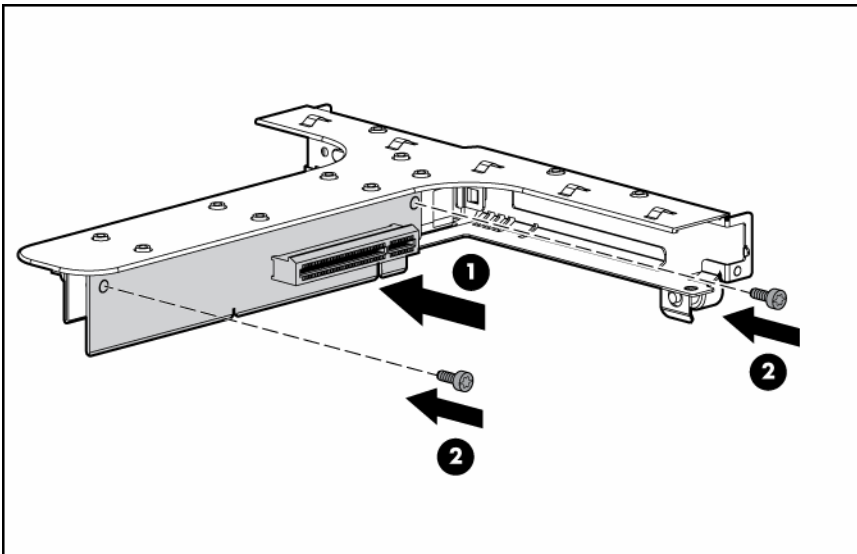

8. Install any PCI Express expansion boards ("[Expansion board](#)" on page 39).

9. Install the PCI riser board assembly ("[Installing the PCI riser board assembly](#)" on page 18).



IMPORTANT: The server will not power up if the PCI riser board assembly is not seated properly.

10. Install the access panel ("[Installing the access panel](#)" on page 17).

11. Install the server into the rack ("[Installing the server into the rack](#)" on page 25).

Server cabling

In this section

Cabling overview	43
Server cable routing	43
Embedded SATA controller cable routing	44
Optional SATA/SAS controller cable routing	44

Cabling overview


This section provides guidelines that help you make informed decisions about cabling the server and hardware options to optimize performance.

For information on cabling peripheral components, refer to the white paper on high-density deployment at the HP website (<http://www.hp.com/products/servers/platforms>).

Server cable routing


CAUTION: When routing cables, always be sure that the cables are not in a position where they can be pinched or air flow can be blocked.

IMPORTANT: Route the cables without blocking the airflow or other installed components. Use the cable clips installed in the chassis to manage cable routing.

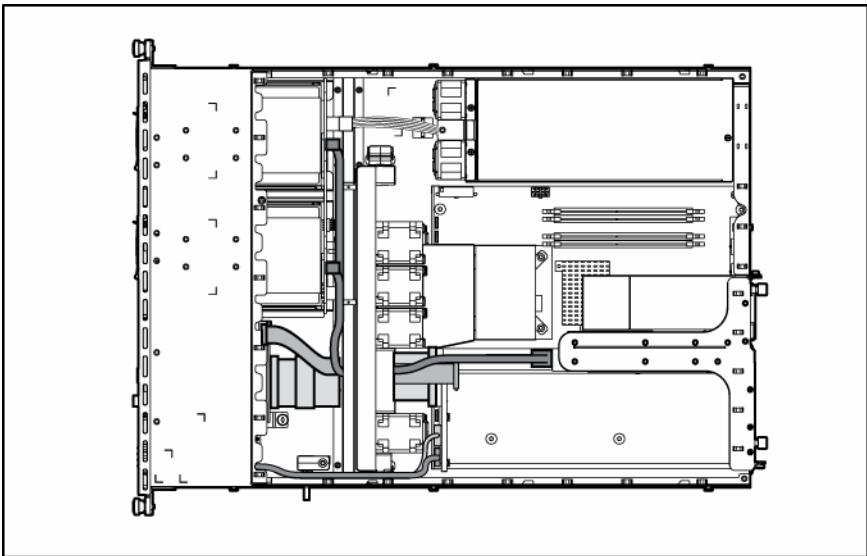


Embedded SATA controller cable routing

⚠ **CAUTION:** When routing cables, always be sure that the cables are not in a position where they can be pinched or air flow can be blocked.

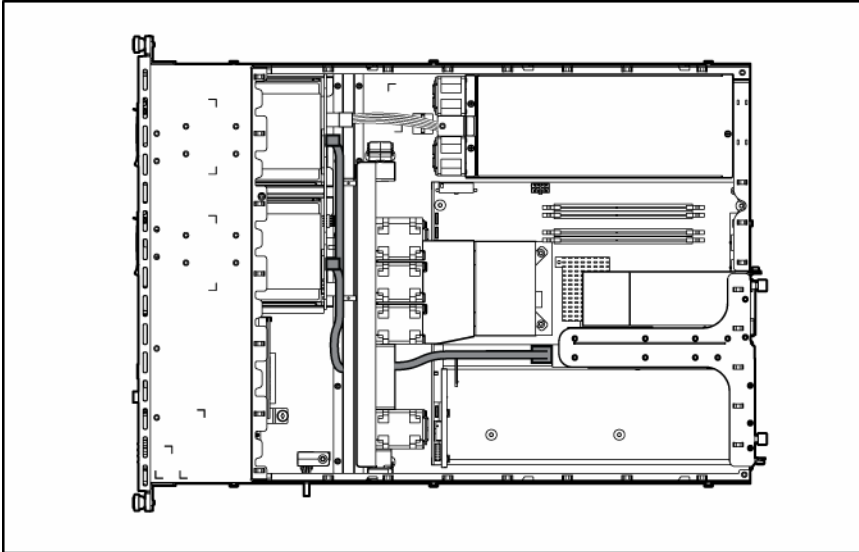

Optional SATA/SAS controller cable routing

⚠ **CAUTION:** When routing cables, always be sure that the cables are not in a position where they can be pinched or air flow can be blocked.

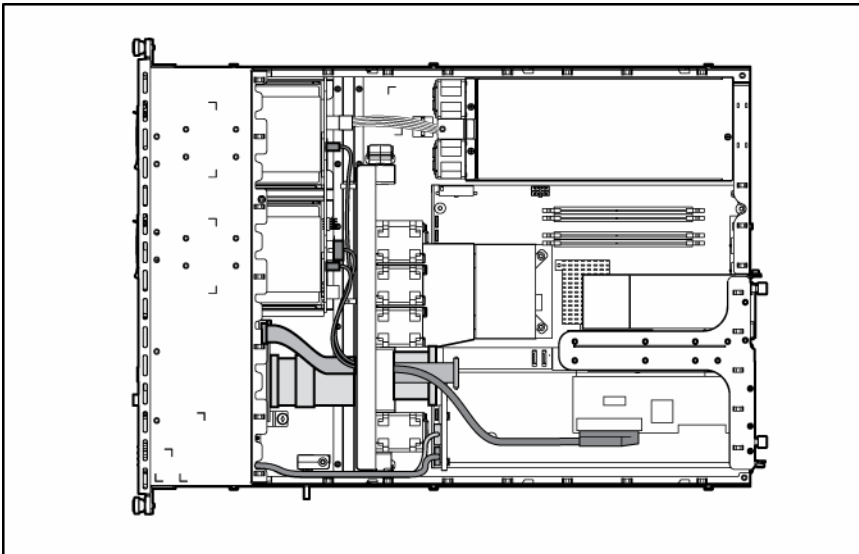

Server software and configuration utilities

In this section

Configuration tools	45
Management tools.....	48
Diagnostic tools	50
Keeping the system current	51

Configuration tools

SmartStart software

SmartStart is a collection of software that optimizes single-server setup, providing a simple and consistent way to deploy server configuration. SmartStart has been tested on many ProLiant server products, resulting in proven, reliable configurations.

SmartStart assists the deployment process by performing a wide range of configuration activities, including:

- Configuring hardware using embedded configuration utilities, such as RBSU and ORCA
- Preparing the system for installing "off-the-shelf" versions of leading operating system software
- Installing optimized server drivers, management agents, and utilities automatically with every assisted installation
- Testing server hardware using the Insight Diagnostics Utility ("[HP Insight Diagnostics](#)" on page [50](#))
- Installing software drivers directly from the CD. With systems that have internet connection, the SmartStart Autorun Menu provides access to a complete list of ProLiant system software.
- Enabling access to the Array Configuration Utility (on page [47](#)), Array Diagnostic Utility (on page [51](#)), and Erase Utility (on page [49](#))

SmartStart is included in the HP ProLiant Essentials Foundation Pack. For more information about SmartStart software, refer to the HP ProLiant Essentials Foundation Pack or the HP website (<http://www.hp.com/servers/smartstart>).

SmartStart Scripting Toolkit

The SmartStart Scripting Toolkit is a server deployment product that delivers an unattended automated installation for high-volume server deployments. The SmartStart Scripting Toolkit is designed to support ProLiant BL, ML, and DL servers. The toolkit includes a modular set of utilities and important documentation that describes how to apply these new tools to build an automated server deployment process.

Using SmartStart technology, the Scripting Toolkit provides a flexible way to create standard server configuration scripts. These scripts are used to automate many of the manual steps in the server configuration process. This automated server configuration process cuts time from each server deployed, making it possible to scale server deployments to high volumes in a rapid manner.

For more information, and to download the SmartStart Scripting Toolkit, refer to the HP website (<http://www.hp.com/servers/sstoolkit>).

HP ROM-Based Setup Utility

RBSU, an embedded configuration utility, performs a wide range of configuration activities that may include:

- Configuring system devices and installed options
- Displaying system information
- Selecting the primary boot controller
- Configuring memory options
- Language selection

For more information on RBSU, refer to the *HP ROM-Based Setup Utility User Guide* on the Documentation CD or the HP website (<http://www.hp.com/servers/smartstart>).

Using RBSU

The first time you power up the server, the system prompts you to enter RBSU and select a language. Default configuration settings are made at this time and can be changed later. Most of the features in RBSU are not required to set up the server.

To navigate RBSU, use the following keys:

- To access RBSU, press the **F9** key during power up when prompted in the upper right corner of the screen.
- To navigate the menu system, use the arrow keys.
- To make selections, press the **Enter** key.



IMPORTANT: RBSU automatically saves settings when you press the **Enter** key. The utility does not prompt you for confirmation of settings before you exit the utility. To change a selected setting, you must select a different setting and press the **Enter** key.

Auto-configuration process



IMPORTANT: The **F8** key is available only when a supported storage controller is installed in the server.

The auto-configuration process automatically runs when you boot the server for the first time. During the power-up sequence, the system ROM automatically configures the entire system without needing any intervention. During this process, the ORCA utility, in most cases, automatically configures the array to a default setting based on the number of drives connected to the server.



NOTE: The server may not support all the following examples.



NOTE: If the boot drive is not empty or has been written to in the past, ORCA does not automatically configure the array. You must run ORCA to configure the array settings.

Drives installed	Drives used	RAID level
1	1	RAID 0
2	2	RAID 1
3, 4, 5, or 6	3, 4, 5, or 6	RAID 5
More than 6	0	None

To change any ORCA default settings and override the auto-configuration process, press the **F8** key when prompted.

By default, the auto-configuration process configures the system for the English language. To change any default settings in the auto-configuration process (such as the settings for language, operating system, and

primary boot controller), execute RBSU by pressing the **F9** key when prompted. After the settings are selected, exit RBSU and allow the server to reboot automatically.

For more information, refer to the *HP ROM-Based Setup Utility User Guide* on the Documentation CD or the HP website (<http://www.hp.com/servers/smartstart>).

Boot options

After the auto-configuration process completes, or after the server reboots upon exit from RBSU, the POST sequence runs, and then the boot option screen is displayed. This screen is visible for several seconds before the system attempts to boot from either a diskette, CD, or hard drive. During this time, the menu on the screen allows you to install an operating system or make changes to the server configuration in RBSU.

BIOS Serial Console

BIOS Serial Console allows you to configure the serial port to view POST error messages and run RBSU remotely through a serial connection to the server COM port. The server that you are remotely configuring does not require a keyboard and mouse.

For more information about BIOS Serial Console, refer to the *BIOS Serial Console User Guide* on the Documentation CD or the HP website (<http://www.hp.com/servers/smartstart>).

Array Configuration Utility

ACU is a browser-based utility with the following features:

- Runs as a local application or remote service
- Supports online array capacity expansion, logical drive extension, assignment of online spares, and RAID or stripe size migration
- Suggests the optimum configuration for an unconfigured system
- Provides different operating modes, enabling faster configuration or greater control over the configuration options
- Remains available any time that the server is on
- Displays on-screen tips for individual steps of a configuration procedure

For optimum performance, the minimum display settings are 800 × 600 resolution and 256 colors. Servers running Microsoft® operating systems require Internet Explorer 5.5 (with Service Pack 1) or later. For Linux servers, refer to the README.TXT file for additional browser and support information.

For more information, refer to the *HP Array Configuration Utility User Guide* on the Documentation CD or the HP website (<http://www.hp.com>).

HP ProLiant Essentials Rapid Deployment Pack

The RDP software is the preferred method for rapid, high-volume server deployments. The RDP software integrates two powerful products: Altiris Deployment Solution and the HP ProLiant Integration Module.

The intuitive graphical user interface of the Altiris Deployment Solution console provides simplified point-and-click and drag-and-drop operations that enable you to deploy target servers, including server blades, remotely. It enables you to perform imaging or scripting functions and maintain software images.

For more information about the RDP, refer to the HP ProLiant Essentials Rapid Deployment Pack CD or refer to the HP website (<http://www.hp.com/servers/rdp>).

Re-entering the server serial number and product ID

After you replace the system board, you must re-enter the server serial number and the product ID.

1. During the server startup sequence, press the **F9** key to access RBSU.
2. Select the **System Options** menu.
3. Select **Serial Number**. The following warning is displayed:
WARNING! WARNING! WARNING! The serial number is loaded into the system during the manufacturing process and should NOT be modified. This option should only be used by qualified service personnel. This value should always match the serial number sticker located on the chassis.
4. Press the **Enter** key to clear the warning.
5. Enter the serial number and press the **Enter** key.
6. Select **Product ID**.
7. Enter the product ID and press the **Enter** key.
8. Press the **Esc** key to close the menu.
9. Press the **Esc** key to exit RBSU.
10. Press the **F10** key to confirm exiting RBSU. The server will automatically reboot.

Management tools

Automatic Server Recovery

ASR is a feature that causes the system to restart when a catastrophic operating system error occurs, such as a blue screen, ABEND, or panic. A system fail-safe timer, the ASR timer, starts when the System Management driver, also known as the Health Driver, is loaded. When the operating system is functioning properly, the system periodically resets the timer. However, when the operating system fails, the timer expires and restarts the server.

ASR increases server availability by restarting the server within a specified time after a system hang or shutdown. At the same time, the HP SIM console notifies you by sending a message to a designated pager number that ASR has restarted the system. You can disable ASR from the HP SIM console or through RBSU.

ROMPaq utility

Flash ROM enables you to upgrade the firmware (BIOS) with system or option ROMPaq utilities. To upgrade the BIOS, insert a ROMPaq diskette into the diskette drive and boot the system.

The ROMPaq utility checks the system and provides a choice (if more than one exists) of available ROM revisions. This procedure is the same for both system and option ROMPaq utilities.

For more information about the ROMPaq utility, refer to the HP website (<http://www.hp.com/servers/manage>).

Integrated Lights-Out 2 technology

The iLO 2 subsystem is a standard component of selected ProLiant servers that provides server health and remote server manageability. The iLO 2 subsystem includes an intelligent microprocessor, secure memory, and a dedicated network interface. This design makes iLO 2 independent of the host server and its operating system. The iLO 2 subsystem provides remote access to any authorized network client, sends alerts, and provides other server management functions.


Using iLO 2, you can:

- Remotely power up, power down, or reboot the host server.

- Send alerts from iLO 2 regardless of the state of the host server.
- Access advanced troubleshooting features through the iLO 2 interface.
- Diagnose iLO 2 using HP SIM through a web browser and SNMP alerting.

For more information about iLO 2 features, refer to the *Integrated Lights-Out 2 User Guide* on the Documentation CD or on the HP website (<http://www.hp.com/servers/lights-out>).

Erase Utility

 **CAUTION:** Perform a backup before running the System Erase Utility. The utility sets the system to its original factory state, deletes the current hardware configuration information, including array setup and disk partitioning, and erases all connected hard drives completely. Refer to the instructions for using this utility.


Run the Erase Utility if you must erase the system for the following reasons:

- You want to install a new operating system on a server with an existing operating system.
- You encounter an error when completing the steps of a factory-installed operating system installation.

The Erase Utility can be accessed from the **Maintenance Utilities** menu of the SmartStart CD ("SmartStart software" on page 45).

HP Systems Insight Manager

HP SIM is a web-based application that allows system administrators to accomplish normal administrative tasks from any remote location, using a web browser. HP SIM provides device management capabilities that consolidate and integrate management data from HP and third-party devices.

 **IMPORTANT:** You must install and use HP SIM to benefit from the Pre-Failure Warranty for processors, SCSI hard drives, and memory modules.


For additional information, refer to the Management CD in the HP ProLiant Essentials Foundation Pack or the HP SIM website (<http://www.hp.com/go/hpsim>).

Management Agents

Management Agents provide the information to enable fault, performance, and configuration management. The agents allow easy manageability of the server through HP SIM software, and third-party SNMP management platforms. Management Agents are installed with every SmartStart assisted installation or can be installed through the HP PSP. The Systems Management homepage provides status and direct access to in-depth subsystem information by accessing data reported through the Management Agents. For additional information, refer to the Management CD in the HP ProLiant Essentials Foundation Pack or the HP website (<http://www.hp.com/servers/manage>).

Redundant ROM support

The server enables you to upgrade or configure the ROM safely with redundant ROM support. The server has a 4-MB ROM that acts as two, separate 2-MB ROMs. In the standard implementation, one side of the ROM contains the current ROM program version, while the other side of the ROM contains a backup version.

 **NOTE:** The server ships with the same version programmed on each side of the ROM.

Safety and security benefits

When you flash the system ROM, ROMPaq writes over the backup ROM and saves the current ROM as a backup, enabling you to switch easily to the alternate ROM version if the new ROM becomes corrupted.

for any reason. This feature protects the existing ROM version, even if you experience a power failure while flashing the ROM.

USB support and functionality

USB support (on page 50)

Internal USB functionality (on page 50)

USB support

HP provides both standard USB support and legacy USB support. Standard support is provided by the operating system through the appropriate USB device drivers. HP provides support for USB devices before the operating system loads through legacy USB support, which is enabled by default in the system ROM. HP hardware supports USB version 1.1 or 2.0, depending on the version of the hardware.

Legacy USB support provides USB functionality in environments where USB support is normally not available. Specifically, HP provides legacy USB functionality for:

- POST
- RBSU
- Diagnostics
- DOS
- Operating environments which do not provide native USB support

For more information on ProLiant USB support, refer to the HP website (<http://h18004.www1.hp.com/products/servers/platforms/usb-support.html>).

Internal USB functionality

An internal USB connector is available for use with USB drive keys only. The internal connector shares the same bus with the front external USB connector, and connecting a device to both the front internal and front external USB connectors is not supported. This solution provides for use of a permanent boot drive from a USB drive key installed in the front internal connector, avoiding issues of clearance on the front of the rack and physical access to secure data.

For additional security, you can individually disable the front, rear, and internal USB connectors through RBSU. Disabling the rear USB connectors in RBSU disables both rear USB ports.

Diagnostic tools

HP Insight Diagnostics

HP Insight Diagnostics is a proactive server management tool, available in both offline and online versions, that provides diagnostics and troubleshooting capabilities to assist IT administrators who verify server installations, troubleshoot problems, and perform repair validation.

HP Insight Diagnostics Offline Edition performs various in-depth system and component testing while the OS is not running. To run this utility, launch the SmartStart CD.

HP Insight Diagnostics Online Edition is a web-based application that captures system configuration and other related data needed for effective server management. Available in Microsoft® Windows® and Linux versions, the utility helps to ensure proper system operation.

For more information or to download the utility, refer to the HP website (<http://www.hp.com/servers/diags>).

Survey Utility

Survey Utility, a feature within HP Insight Diagnostics (on page 50), gathers critical hardware and software information on ProLiant servers.

This utility supports operating systems that may not be supported by the server. For operating systems supported by the server, refer to the HP website (<http://www.hp.com/go/supportos>).

If a significant change occurs between data-gathering intervals, the Survey Utility marks the previous information and overwrites the Survey text files to reflect the latest changes in the configuration.

Survey Utility is installed with every SmartStart-assisted installation or can be installed through the HP PSP ("ProLiant Support Packs" on page 52).

Integrated Management Log

The IML records hundreds of events and stores them in an easy-to-view form. The IML timestamps each event with 1-minute granularity.

You can view recorded events in the IML in several ways, including the following:

- From within HP SIM ("HP Systems Insight Manager" on page 49)
- From within Survey Utility (on page 51)
- From within operating system-specific IML viewers
 - For NetWare: IML Viewer
 - For Windows®: IML Viewer
 - For Linux: IML Viewer Application
- From within HP Insight Diagnostics (on page 50)

For more information, refer to the Management CD in the HP ProLiant Essentials Foundation Pack.

Array Diagnostic Utility

ADU is tool that collects information about array controllers and generates a list of detected problems. ADU can be accessed from the SmartStart CD ("SmartStart software" on page 45) or downloaded from the HP website (<http://www.hp.com>).

Keeping the system current

Drivers

The server includes new hardware that may not have driver support on all operating system installation media.

If you are installing a SmartStart-supported operating system, use the SmartStart software (on page 45) and its Assisted Path feature to install the operating system and latest driver support.



NOTE: If you are installing drivers from the SmartStart CD or the Software Maintenance CD, refer to the SmartStart website (<http://www.hp.com/servers/smartstart>) to be sure that you are using the latest version of SmartStart. For more information, refer to the documentation provided with the SmartStart CD.

If you do not use the SmartStart CD to install an operating system, drivers for some of the new hardware are required. These drivers, as well as other option drivers, ROM images, and value-add software can be downloaded from the HP website (<http://www.hp.com/support>).



IMPORTANT: Always perform a backup before installing or updating device drivers.

Version control

The VCRM and VCA are Web-enabled Insight Management Agents. HP Systems Insight Manager uses these Insight Management Agents to facilitate software update tasks.

- The **VCRM** provides a graphical view of the Windows® and Linux PSPs that are stored in a repository and can be configured to automatically update the repository with the latest software from HP.
- The **VCA** can be configured to point to a repository being managed by the VCRM, enabling easy version comparison and software updates.

For more information about version control tools, refer to the *HP Systems Insight Manager Help Guide* and the *Version Control User Guide* on the HP Systems Insight Manager website (<http://www.hp.com/go/hpsim>).

ProLiant Support Packs

PSPs represent operating system-specific bundles of ProLiant optimized drivers, utilities, and management agents. Refer to the PSP website (<http://h18000.www1.hp.com/products/servers/management/psp.html>).

Operating system version support

Refer to the operating system support matrix (<http://www.hp.com/go/supportos>).

System Online ROM Flash Component Utility

The Online ROM Flash Component Utility enables system administrators to efficiently upgrade system or controller ROM images across a wide range of servers and array controllers. This tool has the following features:

- Works offline and online
- Supports Microsoft® Windows NT®, Windows® 2000, Windows® Server 2003, and Linux operating systems



IMPORTANT: This utility supports operating systems that may not be supported by the server. For operating systems supported by the server, refer to the HP website (<http://www.hp.com/go/supportos>).

- Integrates with other software maintenance, deployment, and operating system tools
- Automatically checks for hardware, firmware, and operating system dependencies, and installs only the correct ROM upgrades required by each target server

To download the tool and for more information, refer to the HP website (<http://h18000.www1.hp.com/support/files/index.html>).

Change control and proactive notification

HP offers Change Control and Proactive Notification to notify customers 30 to 60 days in advance of upcoming hardware and software changes on HP commercial products.

For more information, refer to the HP website (<http://h18023.www1.hp.com/solutions/pcsolutions/pcn.html>).

Care Pack

HP Care Pack Services offer upgraded service levels to extend and expand standard product warranty with easy-to-buy, easy-to-use support packages that help you make the most of your server investments. Refer to the Care Pack website (http://www.hp.com/hps/carepack/servers/cp_proliant.html).

Troubleshooting

In this section

Troubleshooting resources	54
Server diagnostic steps	54
Important safety information	55
Preparing the server for diagnosis	56
Symptom information	57
Service notifications	57
Loose connections	57
Diagnostic steps	58
POST error messages and beep codes	69

Troubleshooting resources

The *HP ProLiant Servers Troubleshooting Guide* provides simple procedures for resolving common problems as well as a comprehensive course of action for fault isolation and identification, error message interpretation, issue resolution, and software maintenance.

To obtain the guide, refer to any of the following sources and then select the *HP ProLiant Servers Troubleshooting Guide*.

- The server-specific Documentation CD
- The Business Support Center on the HP website (<http://www.hp.com/support>). You can find the guide by using the navigation features on the HP website.
- The Technical Documentation website (<http://www.docs.hp.com>). Select **Enterprise Servers, Workstations and Systems Hardware**, and then the appropriate server.

Server diagnostic steps

This section covers the steps to take in order to diagnose a problem quickly.

To effectively troubleshoot a problem, HP recommends that you start with the first flowchart in this section, "Start diagnosis flowchart (on page 58)," and follow the appropriate diagnostic path. If the other flowcharts do not provide a troubleshooting solution, follow the diagnostic steps in "General diagnosis flowchart (on page 59)." The General diagnosis flowchart is a generic troubleshooting process to be used when the problem is not server-specific or is not easily categorized into the other flowcharts.



IMPORTANT: This guide provides information for multiple servers. Some information may not apply to the server you are troubleshooting. Refer to the server documentation for information on procedures, hardware options, software tools, and operating systems supported by the server.



WARNING: To avoid potential problems, **ALWAYS** read the warnings and cautionary information in the server documentation before removing, replacing, reseating, or modifying system components.

Important safety information

Familiarize yourself with the safety information in the following sections before troubleshooting the server.



Important safety information

Before servicing this product, read the *Important Safety Information* document provided with the server.

Symbols on equipment

The following symbols may be placed on equipment to indicate the presence of potentially hazardous conditions.



This symbol indicates the presence of hazardous energy circuits or electric shock hazards. Refer all servicing to qualified personnel.

WARNING: To reduce the risk of injury from electric shock hazards, do not open this enclosure. Refer all maintenance, upgrades, and servicing to qualified personnel.



This symbol indicates the presence of electric shock hazards. The area contains no user or field serviceable parts. Do not open for any reason.

WARNING: To reduce the risk of injury from electric shock hazards, do not open this enclosure.



This symbol on an RJ-45 receptacle indicates a network interface connection.

WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



This symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.

WARNING: To reduce the risk of injury from a hot component, allow the surface to cool before touching.



49-109 kg
100-240 lb

This symbol indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



These symbols, on power supplies or systems, indicate that the equipment is supplied by multiple sources of power.

WARNING: To reduce the risk of injury from electric shock, remove all power cords to completely disconnect power from the system.

Warnings and cautions

- ⚠ WARNING:** Only authorized technicians trained by HP should attempt to repair this equipment. All troubleshooting and repair procedures are detailed to allow only subassembly/module-level repair. Because of the complexity of the individual boards and subassemblies, no one should attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create a safety hazard.
- ⚠ WARNING:** To reduce the risk of personal injury or damage to the equipment, be sure that:
- The leveling feet are extended to the floor.
 - The full weight of the rack rests on the leveling feet.
 - The stabilizing feet are attached to the rack if it is a single-rack installation.
 - The racks are coupled together in multiple-rack installations.
 - Only one component is extended at a time. A rack may become unstable if more than one component is extended for any reason.
- ⚠ WARNING:** To reduce the risk of electric shock or damage to the equipment:
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
 - Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
 - Unplug the power cord from the power supply to disconnect power to the equipment.
 - Do not route the power cord where it can be walked on or pinched by items placed against it. Pay particular attention to the plug, electrical outlet, and the point where the cord extends from the server.



49-109 kg

100-240 lb

WARNING: To reduce the risk of personal injury or damage to the equipment:

- Observe local occupation health and safety requirements and guidelines for manual handling.
 - Obtain adequate assistance to lift and stabilize the chassis during installation or removal.
 - The server is unstable when not fastened to the rails.
 - When mounting the server in a rack, remove the power supplies and any other removable module to reduce the overall weight of the product.
-

- ⚠ CAUTION:** To properly ventilate the system, you must provide at least 7.6 cm (3.0 in) of clearance at the front and back of the server.
- ⚠ CAUTION:** The server is designed to be electrically grounded (earthed). To ensure proper operation, plug the AC power cord into a properly grounded AC outlet only.

Preparing the server for diagnosis

1. Be sure the server is in the proper operating environment with adequate power, air conditioning, and humidity control. Refer to the server documentation for required environmental conditions.
2. Record any error messages displayed by the system.
3. Remove all diskettes and CDs from the media drives.
4. Power down the server and peripheral devices if you will be diagnosing the server offline. Always perform an orderly shutdown, if possible. This means you must:

- a. Exit any applications.
 - b. Exit the operating system.
 - c. Power down the server ("[Powering down the server](#)" on page 15).
5. Disconnect any peripheral devices not required for testing (any devices not necessary to power up the server). Do not disconnect the printer if you want to use it to print error messages.
6. Collect all tools and utilities, such as a Torx screwdriver, loopback adapters, ESD wrist strap, and software utilities, necessary to troubleshoot the problem.
- You must have the appropriate Health Drivers and Management Agents installed on the server.



NOTE: To verify the server configuration, connect to the System Management homepage and select **Version Control Agent**. The VCA gives you a list of names and versions of all installed HP drivers, Management Agents, and utilities, and whether they are up to date.

- HP recommends you have access to the SmartStart CD for value-added software and drivers required during the troubleshooting process.
- HP recommends you have access to the server documentation for server-specific information.

Symptom information

Before troubleshooting a server problem, collect the following information:

- What events preceded the failure? After which steps does the problem occur?
- What has been changed between the time the server was working and now?
- Did you recently add or remove hardware or software? If so, did you remember to change the appropriate settings in the server setup utility, if necessary?
- Has the server exhibited problem symptoms for a period of time?
- If the problem occurs randomly, what is the duration or frequency?

To answer these questions, the following information may be useful:

- Run HP Insight Diagnostics (on page 50) and use the survey page to view the current configuration or to compare it to previous configurations.
- Refer to your hardware and software records for information.

Service notifications

To view the latest service notifications, refer to the HP website (<http://www.hp.com/go/bizsupport>). Select the appropriate server model, and then click the **Troubleshoot a Problem** link on the product page.

Loose connections

Action:

- Be sure all power cords are securely connected.
- Be sure all cables are properly aligned and securely connected for all external and internal components.
- Remove and check all data and power cables for damage. Be sure no cables have bent pins or damaged connectors.
- If a fixed cable tray is available for the server, be sure the cords and cables connected to the server are correctly routed through the tray.

- Be sure each device is properly seated.
- If a device has latches, be sure they are completely closed and locked.
- Check any interlock or interconnect LEDs that may indicate a component is not connected properly.
- If problems continue to occur, remove and reinstall each device, checking the connectors and sockets for bent pins or other damage.

Diagnostic steps

To effectively troubleshoot a problem, HP recommends that you start with the first flowchart in this section, "Start diagnosis flowchart (on page 58)," and follow the appropriate diagnostic path. If the other flowcharts do not provide a troubleshooting solution, follow the diagnostic steps in "General diagnosis flowchart (on page 59)." The General diagnosis flowchart is a generic troubleshooting process to be used when the problem is not server-specific or is not easily categorized into the other flowcharts.

The available flowcharts include:


- Start diagnosis flowchart (on page 58)
- General diagnosis flowchart (on page 59)
- Power-on problems flowchart (on page 60)
- POST problems flowchart (on page 62)
- OS boot problems flowchart (on page 65)
- Server fault indications flowchart (on page 66)

The number contained in parentheses in the flowchart boxes corresponds to a table with references to other detailed documents or troubleshooting instructions.

Start diagnosis flowchart

Use the following flowchart to start the diagnostic process.

Item	Refer to
1	"General diagnosis flowchart (on page 59)"
2	"Power-on problems flowchart (on page 60)"
3	"POST problems flowchart (on page 62)"
4	"OS boot problems flowchart (on page 65)"
5	"Server fault indications flowchart (on page 66)"

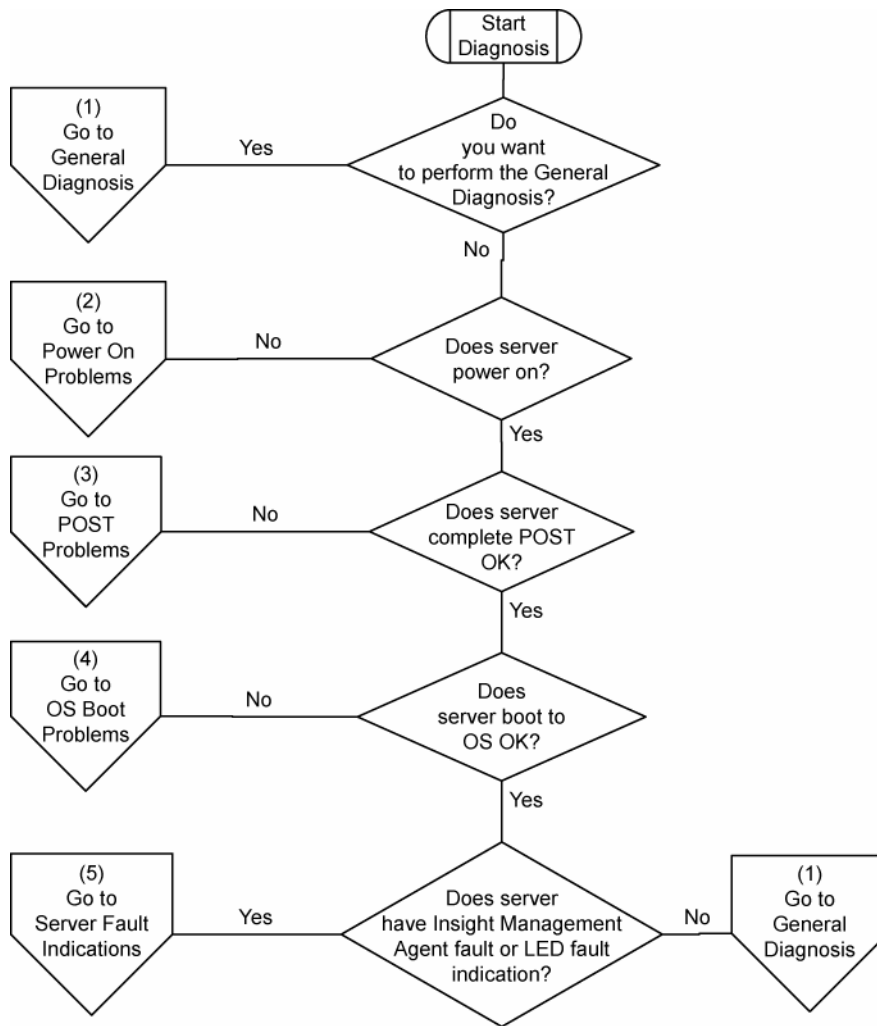


General diagnosis flowchart

The General diagnosis flowchart provides a generic approach to troubleshooting. If you are unsure of the problem, or if the other flowcharts do not fix the problem, use the following flowchart.

Item	Refer to
1	"Symptom information (on page 57)"
2	"Loose connections (on page 57)"
3	"Service notifications (on page 57)"
4	Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
5	Server user guide or setup and installation guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
6	<ul style="list-style-type: none"> Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms) "Hardware problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).

Item	Refer to
7	<ul style="list-style-type: none"> "Server information you need" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support). "Operating system information you need" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
8	"Contacting HP technical support or an authorized reseller" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).

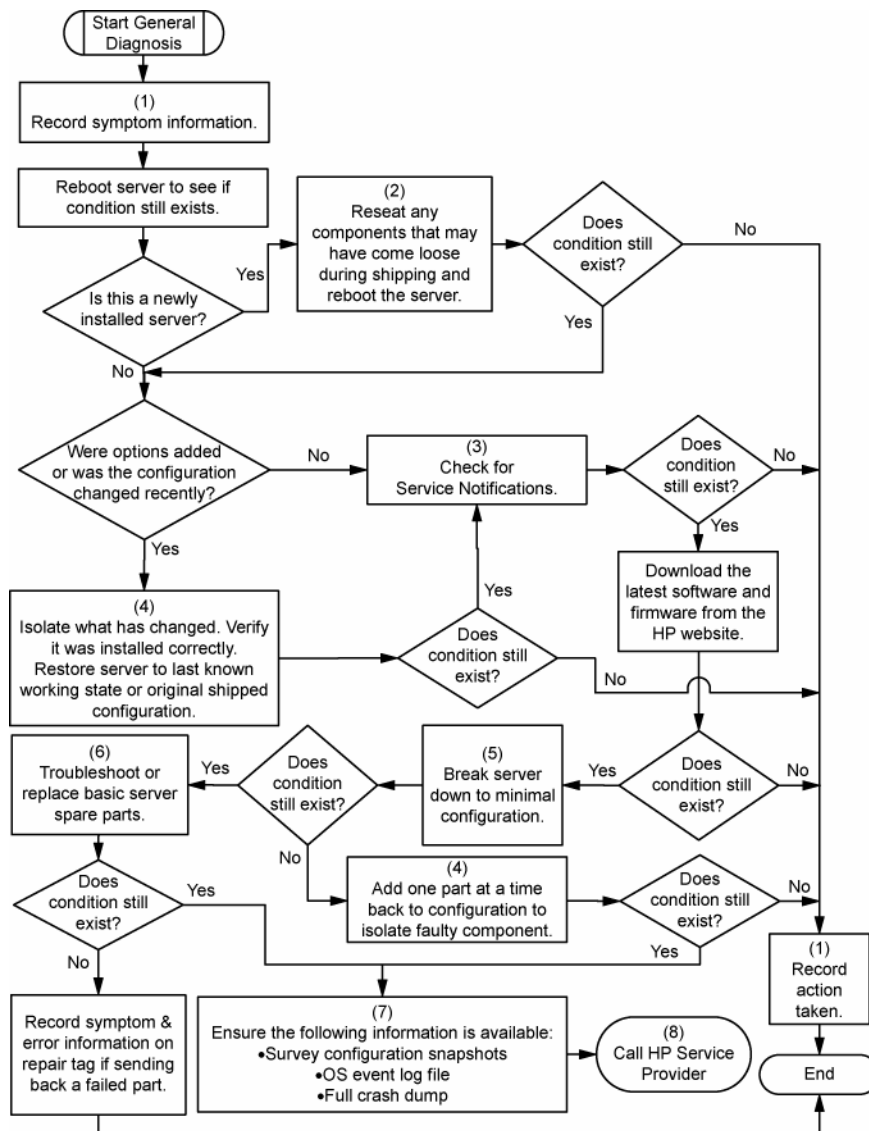

Power-On Problems Flowchart


Symptoms:

- The server does not power on.
- The system power LED is off or amber.
- The internal health LED is red or amber.

Possible causes:

- Improperly seated or faulty power supply
- Loose or faulty power cord
- Power supply cord improperly seated to system board
- Power source problem
- Power on circuit problem
- Improperly seated component or interlock problem
- Faulty internal component

Item	Refer to
1	Server user guide or setup and installation guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms).
2	"HP Insight Diagnostics (on page 50)"
3	"Loose Connections (on page 57)"
4	Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
5	"Integrated Management Log (on page 51)" or in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
6	"Power Source Problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
7	<ul style="list-style-type: none"> • "Power Supply Problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support). • Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
8	"System Open Circuits and Short Circuits" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).

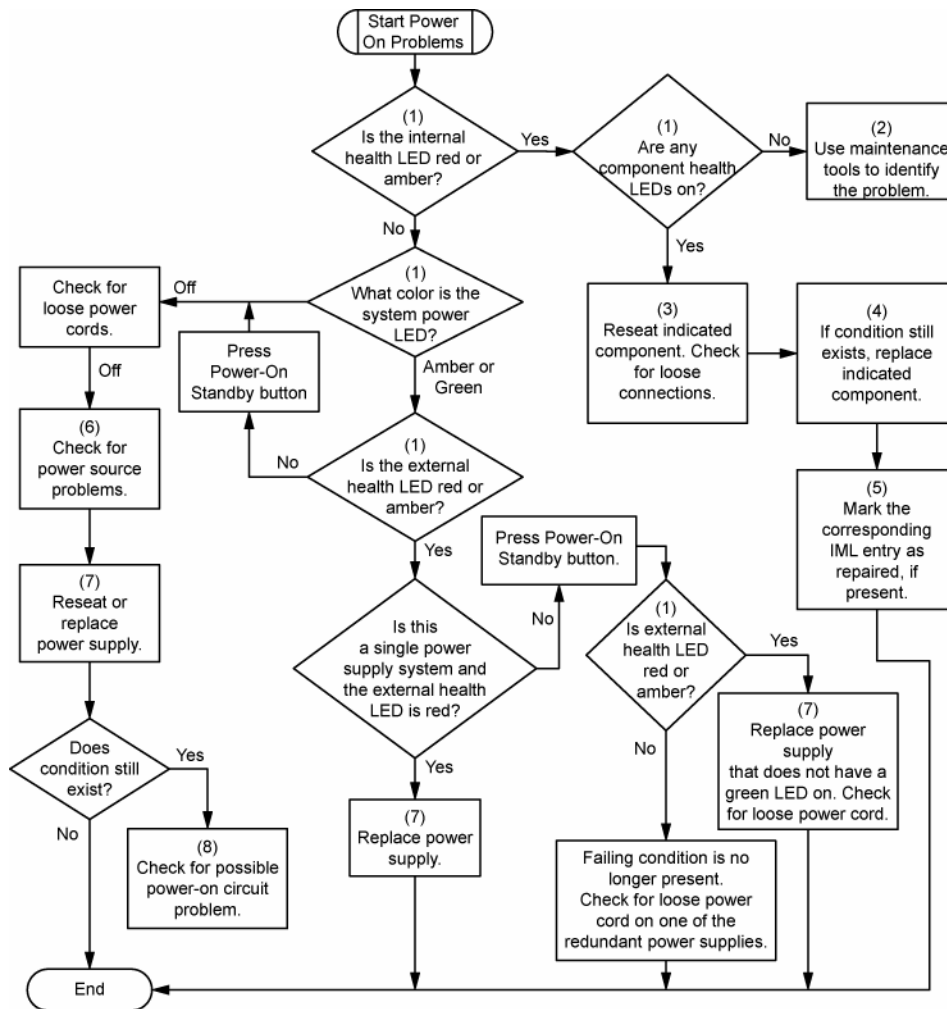

POST problems flowchart

Symptoms:

- Server does not complete POST



NOTE: The server has completed POST when the system attempts to access the boot device.


- Server completes POST with errors

Possible Problems:

- Improperly seated or faulty internal component
- Faulty KVM device
- Faulty video device

Item	Refer to
1	"POST error messages" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
2	"Video problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
3	KVM or RILOE documentation

Item	Refer to
4	"Loose connections (on page 57)"
5	Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
6	Server user guide or setup and installation guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
7	<ul style="list-style-type: none"> • "Hardware problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support). • Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)

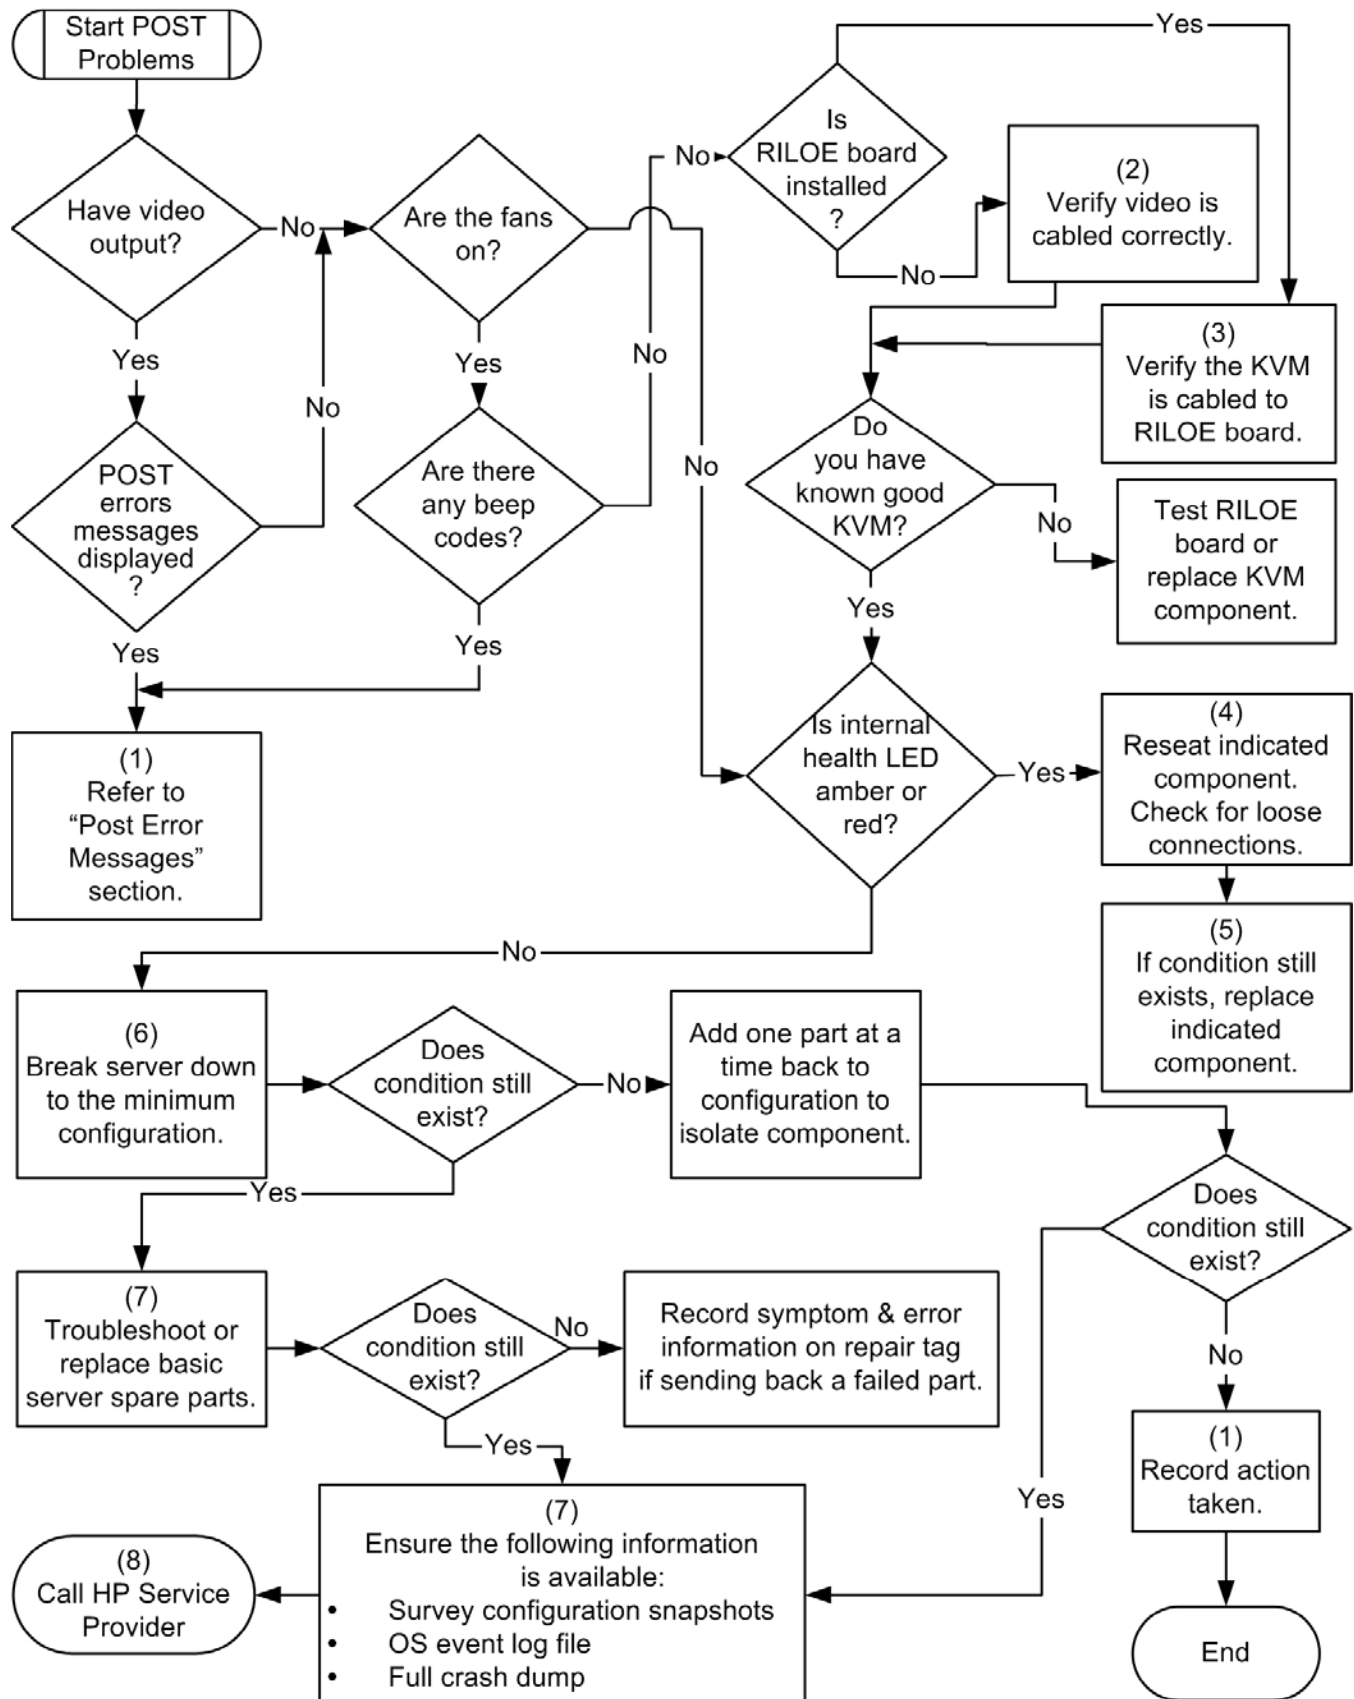

OS boot problems flowchart


Symptoms:

- Server does not boot a previously installed operating system
- Server does not boot SmartStart

Possible Causes:

- Corrupted operating system
- Hard drive subsystem problem

Item	Refer to
1	<i>HP ROM-Based Setup Utility User Guide</i> (http://www.hp.com/servers/smartstart)
2	"POST problems flowchart (on page 62)"
3	<ul style="list-style-type: none">• "Hard drive problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).• Controller documentation
4	"HP Insight Diagnostics (on page 50)"
5	<ul style="list-style-type: none">• "Loose connections (on page 57)"• "CD-ROM and DVD drive problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).• Controller documentation
6	Server user guide or setup and installation guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
7	<ul style="list-style-type: none">• "Operating system problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).• "Contacting HP technical support or an authorized reseller" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
8	<ul style="list-style-type: none">• "Hardware problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).• Server maintenance and service guide, located on the Documentation CD or the HP website (http://www.hp.com/products/servers/platforms)
9	"General diagnosis flowchart (on page 59)"

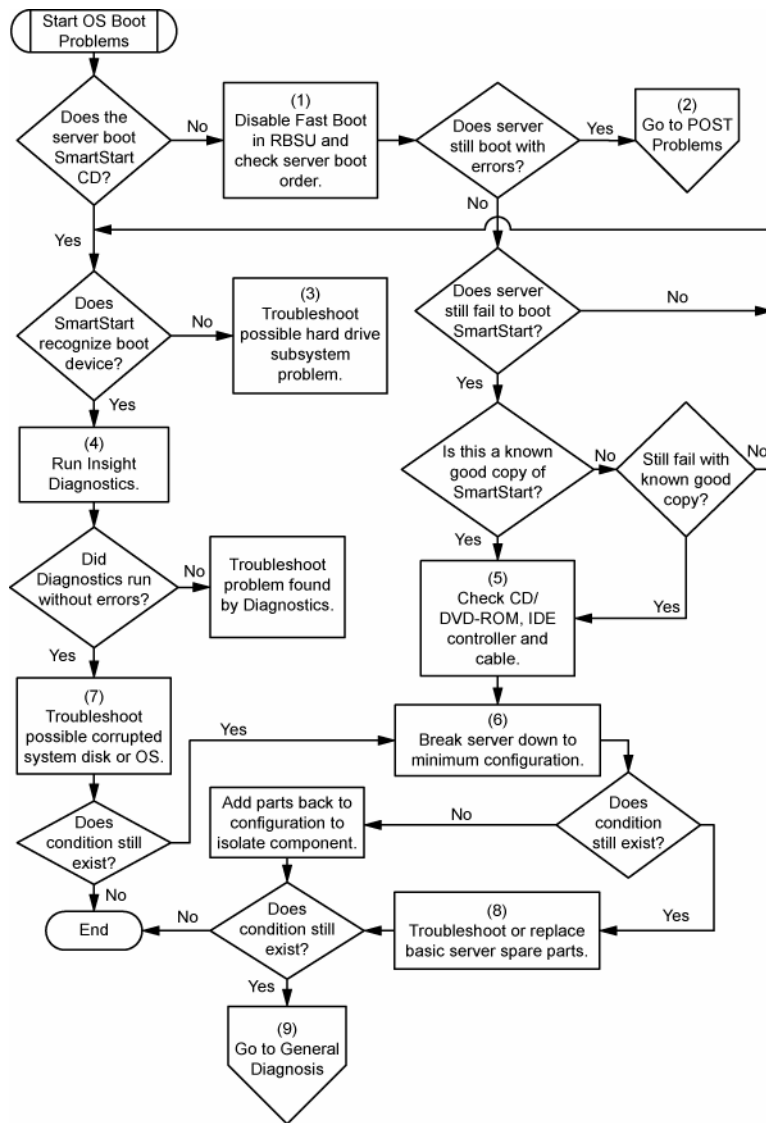

Server fault indications flowchart

Symptoms:

- Server boots, but a fault event is reported by Insight Management agents (on page 49)
- Server boots, but the internal health LED or external health LED is red or amber




NOTE: For the location of server LEDs and information on their statuses, refer to the server documentation.

Possible causes:

- Improperly seated or faulty internal or external component
- Unsupported component installed
- Redundancy failure
- System overtemperature condition


Item	Refer to
1	"Management agents (on page 49)" or in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).

Item	Refer to
2	<ul style="list-style-type: none"> • "Integrated Management Log (on page 51)" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support). • "Event list error messages" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
3	Server user guide, located on the Documentation CD, or the HP website (http://www.hp.com/products/servers/platforms)
4	System Management Homepage at https://localhost:2381 (https://localhost:2381)
5	"Power-on problems ("Power-On Problems Flowchart" on page 60)" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
6	<ul style="list-style-type: none"> • "Hard drive problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support). • Server maintenance and service guide, located on the Documentation CD, or the HP website (http://www.hp.com/products/servers/platforms)
7	"HP Insight Diagnostics (on page 50)" or in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support).
8	<ul style="list-style-type: none"> • "Hardware problems" in the <i>HP ProLiant Servers Troubleshooting Guide</i> located on the Documentation CD or on the HP website (http://www.hp.com/support). • Server maintenance and service guide, located on the Documentation CD, or the HP website (http://www.hp.com/products/servers/platforms)

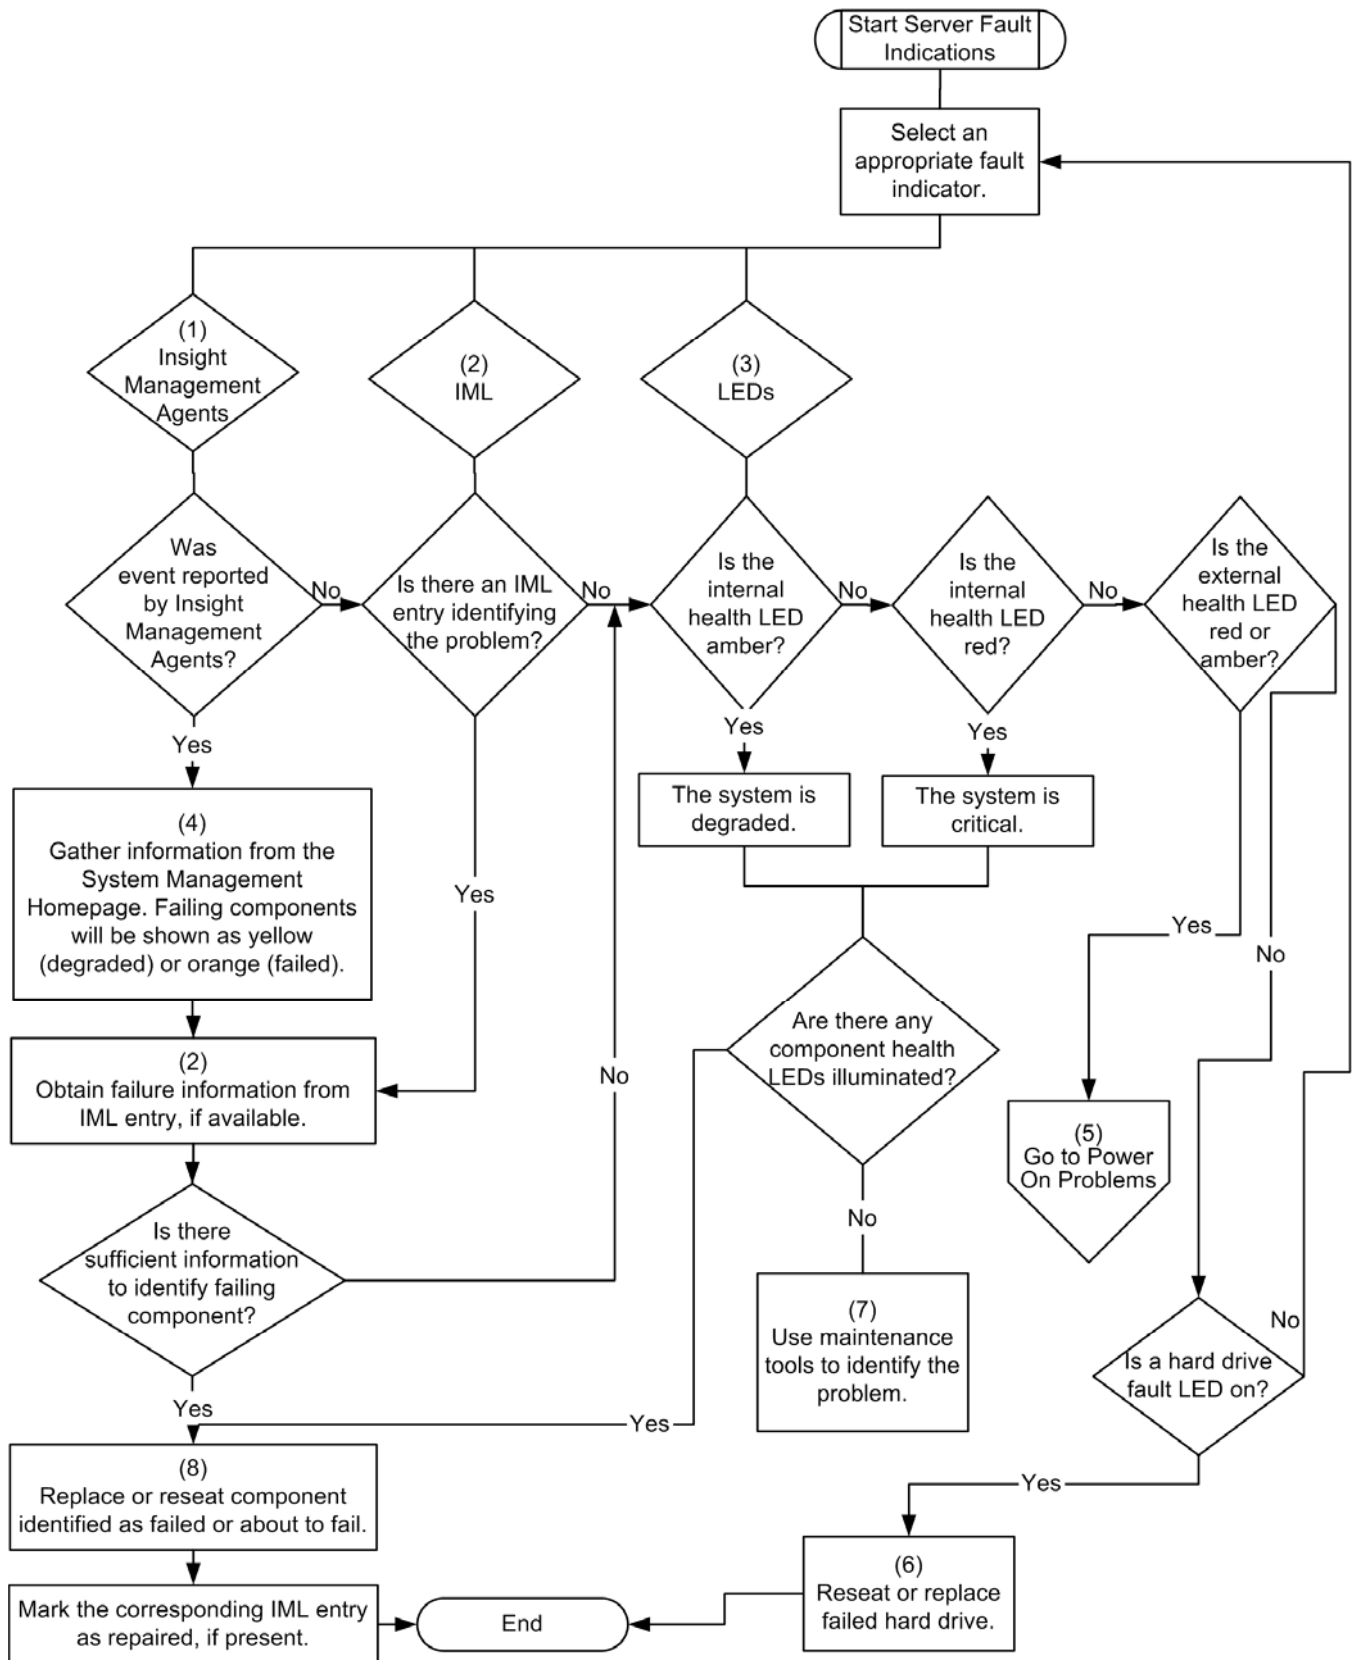

POST error messages and beep codes

For a complete listing of error messages, refer to the "POST error messages" in the *HP ProLiant Servers Troubleshooting Guide* located on the Documentation CD or on the HP website (<http://www.hp.com/support>).

 **WARNING:** To avoid potential problems, **ALWAYS** read the warnings and cautionary information in the server documentation before removing, replacing, reseating, or modifying system components.

Battery replacement

If the server no longer automatically displays the correct date and time, you may need to replace the battery that provides power to the real-time clock. Under normal use, battery life is 5 to 10 years.

⚠ WARNING: The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:


- Do not attempt to recharge the battery.
- Do not expose the battery to temperatures higher than 60°C (140°F).
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the spare designated for this product.

To remove the component:

1. Power down the server ("[Powering down the server](#)" on page 15).
2. Extend or remove the server from the rack ("[Preparation procedures](#)" on page 16).
3. Remove the access panel ("[Removing the access panel](#)" on page 17).
4. Remove the PCI riser cage ("[Removing the PCI riser board assembly](#)" on page 17).

⚠ CAUTION: To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser cage.

5. Remove the battery.

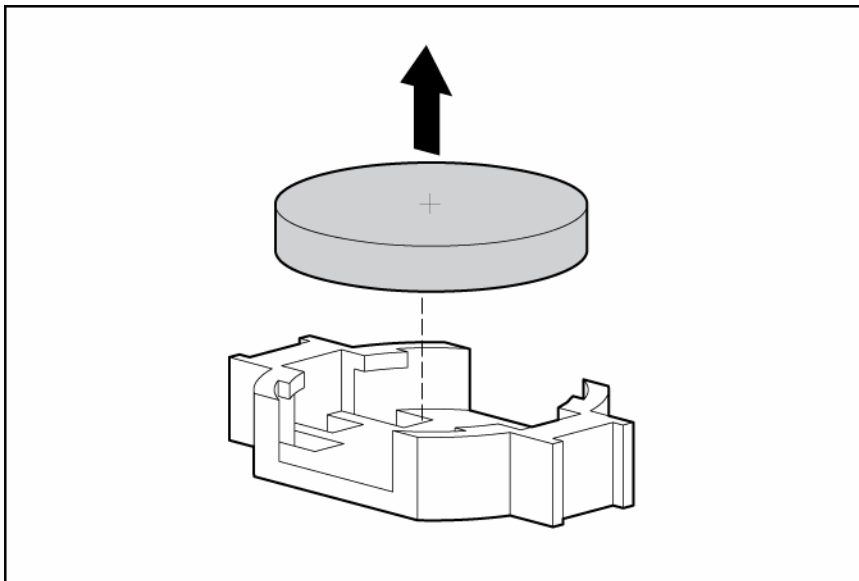

📌 IMPORTANT: Replacing the system board battery resets the system ROM to its default configuration. After replacing the battery, reconfigure the system through RBSU.

To replace the component, reverse the removal procedure.

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

Regulatory compliance notices

In this section

Regulatory compliance identification numbers.....	71
Federal Communications Commission notice	71
Declaration of conformity for products marked with the FCC logo, United States only.....	72
Modifications.....	73
Cables	73
Canadian notice (Avis Canadien)	73
European Union regulatory notice	73
Japanese notice	74
BSMI notice	74
Korean notice A&B.....	74
Laser compliance	75
Battery replacement notice	75
Taiwan battery recycling notice.....	75
Power cord statement for Japan	76
Disposal of waste equipment by users in private households in the European Union.....	76

Regulatory compliance identification numbers

For the purpose of regulatory compliance certifications and identification, this product has been assigned a unique regulatory model number. The regulatory model number can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to this regulatory model number. The regulatory model number is not the marketing name or model number of the product.

Federal Communications Commission notice

Part 15 of the Federal Communications Commission (FCC) Rules and Regulations has established Radio Frequency (RF) emission limits to provide an interference-free radio frequency spectrum. Many electronic devices, including computers, generate RF energy incidental to their intended function and are, therefore, covered by these rules. These rules place computers and related peripheral devices into two classes, A and B, depending upon their intended installation. Class A devices are those that may reasonably be expected to be installed in a business or commercial environment. Class B devices are those that may reasonably be expected to be installed in a residential environment (for example, personal computers). The FCC requires devices in both classes to bear a label indicating the interference potential of the device as well as additional operating instructions for the user.

FCC rating label

The FCC rating label on the device shows the classification (A or B) of the equipment. Class B devices have an FCC logo or ID on the label. Class A devices do not have an FCC logo or ID on the label. After you determine the class of the device, refer to the corresponding statement.

Class A equipment

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at personal expense.

Class B equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit that is different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Declaration of conformity for products marked with the FCC logo, United States only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding this product, contact us by mail or telephone:

- Hewlett-Packard Company
P. O. Box 692000, Mail Stop 530113
Houston, Texas 77269-2000
- 1-800-HP-INVENT (1-800-474-6836). (For continuous quality improvement, calls may be recorded or monitored.)

For questions regarding this FCC declaration, contact us by mail or telephone:

- Hewlett-Packard Company
P. O. Box 692000, Mail Stop 510101
Houston, Texas 77269-2000
- 1-281-514-3333

To identify this product, refer to the part, series, or model number found on the product.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Canadian notice (Avis Canadien)

Class A equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Class B equipment

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union regulatory notice

This product complies with the following EU Directives:

- Low Voltage Directive 73/23/EEC
- EMC Directive 89/336/EEC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family.

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth).



This marking is valid for EU non-harmonized Telecom products.

*Notified body number (used only if applicable—refer to the product label)

Japanese notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

BSMI notice

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Korean notice A&B

Class A equipment

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약 잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

Class B equipment

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Laser compliance


This product may be provided with an optical storage device (that is, CD or DVD drive) and/or fiber optic transceiver. Each of these devices contains a laser that is classified as a Class 1 Laser Product in accordance with US FDA regulations and the IEC 60825-1. The product does not emit hazardous laser radiation.

- ⚠ WARNING: Use of controls or adjustments or performance of procedures other than those specified herein or in the laser product's installation guide may result in hazardous radiation exposure. To reduce the risk of exposure to hazardous radiation:**
- **Do not try to open the module enclosure. There are no user-serviceable components inside.**
 - **Do not operate controls, make adjustments, or perform procedures to the laser device other than those specified herein.**
 - **Allow only HP Authorized Service technicians to repair the unit.**

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. These regulations apply to laser products manufactured from August 1, 1976. Compliance is mandatory for products marketed in the United States.

Battery replacement notice

- ⚠ WARNING: The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:**
- **Do not attempt to recharge the battery.**
 - **Do not expose the battery to temperatures higher than 60°C (140°F).**
 - **Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.**

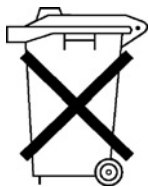

Batteries, battery packs, and accumulators should not be disposed of together with the general household waste. To forward them to recycling or proper disposal, please use the public collection system or return them to HP, an authorized HP Partner, or their agents.

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

Taiwan battery recycling notice

The Taiwan EPA requires dry battery manufacturing or importing firms in accordance with Article 15 of the Waste Disposal Act to indicate the recovery marks on the batteries used in sales, giveaway or promotion. Contact a qualified Taiwanese recycler for proper battery disposal.



Power cord statement for Japan

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Disposal of waste equipment by users in private households in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Electrostatic discharge

In this section

Preventing electrostatic discharge.....	77
Grounding methods to prevent electrostatic discharge	77

Preventing electrostatic discharge

To prevent damaging the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Grounding methods to prevent electrostatic discharge

Several methods are used for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm ± 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity or assistance with product installation, contact an authorized reseller.

Server specifications

In this section

Environmental specifications	78
Server specifications	78

Environmental specifications

Specification	Value
Temperature range*	
Operating	10°C to 35°C (50°F to 95°F)
Shipping	-40°C to 70°C (-40°F to 158°F)
Maximum wet bulb temperature	28°C (82.4°F)
Relative humidity (noncondensing)**	
Operating	10% to 90%
Non-operating	5% to 95%

* All temperature ratings shown are for sea level. An altitude derating of 1°C per 300 m (1.8°F per 1,000 ft) to 3048 m (10,000 ft) is applicable. No direct sunlight allowed.

** Storage maximum humidity of 95% is based on a maximum temperature of 45°C (113°F). Altitude maximum for storage corresponds to a pressure minimum of 70 KPa.

Server specifications

Specification	Value
Dimension	
Height	4.32 cm (1.70 in)
Depth	60.96 cm (24 in)
Width	42.62 cm (16.78 in)
Weight (maximum)	12.27 kg (27 lb)
Weight (no drives installed)	10.91 kg (24 lb)
Input requirement	
Rated input voltage	100 VAC to 240 VAC
Rated input frequency	50 Hz to 60 Hz
Rated input current	6.0 A (110 V) to 3.0 A (220 V)
Rated input power	580 W
BTUs per hour	1990
Power supply output	
Rated steady-state power	350 W

Specification	Value
Acoustic Noise*	
Sound power, L_{WA_d}	
Idle	≤ 6.4 Bels
Operating	≤ 6.4 Bels
Bystander sound pressure, L_{pA_m}	
Idle	≤ 47 dBA
Operating	≤ 47 dBA

*The limits apply when operated in an ambient environment temperature of $+23^{\circ}\text{C} \pm 2^{\circ}$ ($+73.4^{\circ}\text{F} \pm 2^{\circ}$).

Technical support

In this section

Related documents	80
HP contact information	80
Customer self repair	80

Related documents

For related documentation, refer to the Documentation CD.

HP contact information

For the name of the nearest HP authorized reseller:

- In the United States, refer to the HP US service locator webpage (http://www.hp.com/service_locator).
- In other locations, refer to the HP website (<http://www.hp.com>).

For HP technical support:

- In North America:
 - Call 1-800-HP-INVENT (1-800-474-6836). This service is available 24 hours a day, 7 days a week. For continuous quality improvement, calls may be recorded or monitored.
 - If you have purchased a Care Pack (service upgrade), call 1-800-633-3600. For more information about Care Packs, refer to the HP website (<http://www.hp.com>).
- Outside North America, call the nearest HP Technical Support Phone Center. For telephone numbers for worldwide Technical Support Centers, refer to the HP website (<http://www.hp.com>).

Customer self repair

What is customer self repair?

HP's customer self-repair program offers you the fastest service under either warranty or contract. It enables HP to ship replacement parts directly to you so that you can replace them. Using this program, you can replace parts at your own convenience.

A convenient, easy-to-use program:

- An HP support specialist will diagnose and assess whether a replacement part is required to address a system problem. The specialist will also determine whether you can replace the part.
- For specific information about customer replaceable parts, refer to the maintenance and service guide on the HP website (<http://www.hp.com/support>).

Acronyms and abbreviations

ABEND

abnormal end

ACU

Array Configuration Utility

ASR

Automatic Server Recovery

DDR

double data rate

DU

driver update

EFS

Extended Feature Supplement

IEC

International Electrotechnical Commission

iLO

Integrated Lights-Out

IML

Integrated Management Log

IPL

initial program load

IRQ

interrupt request

MPS

multi-processor specification

NEMA

National Electrical Manufacturers Association

NFPA

National Fire Protection Association

NIC

network interface controller

NVRAM

non-volatile memory

ORCA

Option ROM Configuration for Arrays

PCI Express

peripheral component interconnect express

PCI-X

peripheral component interconnect extended

PDU

power distribution unit

POST

Power-On Self Test

PPM

Processor Power Module

PSP

ProLiant Support Pack

PXE

preboot eXecution environment

RBSU

ROM-Based Setup Utility

RILOE II

Remote Insight Lights-Out Edition II

SATA

serial ATA

SCSI

small computer system interface

SDRAM

synchronous dynamic RAM

SIM

Systems Insight Manager

SIMM

single inline memory module

SPM

system power module

SSD

support software diskette

TMRA

recommended ambient operating temperature

UID

unit identification

USB

universal serial bus

VCA

Version Control Agent

VHDCI

very high density cable interconnect

WOL

Wake-on LAN

Index

A

- access panel 17
- additional information 54, 80
- ADU (Array Diagnostic Utility) 51
- Altiris Deployment Solution 47
- Altiris eXpress Deployment Server 47
- array configuration 47
- Array Configuration Utility (ACU) 47
- Array Diagnostic Utility 51
- ASR (Automatic Server Recovery) 48, 81
- authorized reseller 80
- Automatic Server Recovery (ASR) 48, 81
- Autorun menu 45

B

- battery 10, 11, 70, 75
- BIOS upgrade 48
- blue screen event 11
- boot options 47
- BSMI notice 74
- buttons 6

C

- cables 43, 44, 57, 73
- cabling 43, 44
- Care Pack 21, 53
- cautions 56
- CD-ROM drive 6, 31
- CD-ROM drive connectors 10
- Change Control 52
- component identification 6, 8, 9, 10, 11
- components 6
- configuration of system 45
- connection problems 57
- connectors 6, 10
- controller board, installing 40
- controller installation 40, 44
- crash dump analysis 11
- creating a disk image 47
- CSR (customer self repair) 80
- customer self repair 80

D

- DC power supply 10
- deployment software 47
- diagnosing problems 54, 56, 58
- diagnostic steps 54, 58
- diagnostic tools 45, 47, 48, 50, 51
- diagnostics utility 50
- DIMM slot LEDs 11
- DIMM slots 10
- DIMMs 27, 28
- diskette drive 6, 35
- diskette drive connectors 10
- diskette image creation 47
- drive bays 6
- drivers 51
- DVD-ROM drive 6, 31
- DVD-ROM drive connectors 10

E

- electrical grounding requirements 23
- electrostatic discharge 77
- environmental requirements 22
- environmental specifications 78
- Erase Utility 49
- European Union notice 73
- expansion board 39
- extending server from rack 16
- external health LED 6, 7

F

- fan connectors 10
- fan LED 11
- fans 14, 18, 20
- features 6
- Federal Communications Commission (FCC)
 - notice 71, 72, 73
- flash ROM 48
- flowcharts 58, 59, 60, 62, 66
- front panel components 6
- front panel LEDs 7, 10

G

general diagnosis flowchart 59
grounding methods 77
grounding requirements 23

H

hard drive blanks 29
hard drive, replacing 30
hard drives 6, 28, 29, 30
hardware options 27
hardware options installation 24, 27
health driver 48
health LEDs 7
HP Insight Diagnostics 50
HP ProLiant Essentials Foundation Pack 49
HP ProLiant Essentials Rapid Deployment Pack 47
HP Systems Insight Manager, overview 49

I

identification number, server 71
iLO (Integrated Lights-Out) 48
IML (Integrated Management Log) 51
Important Safety Information document 55
Insight Diagnostics 50
installation services 21
installation, server options 24
installing hardware 27
installing operating system 26
Installing Rack Products video 21
Integrated Lights-Out (iLO) 48
Integrated Management Log (IML) 51
internal health LED 6, 7, 12
Internal USB connector 13

J

Japanese notice 74

K

keyboard connector 8
Korean notices 74

L

laser devices 75
LEDs 6, 7, 9, 11, 12, 13
LEDs, troubleshooting 54, 58
loose connections 57

M

Management Agents 49
management tools 48
memory 27, 28
memory dump 11
memory slots 10
mouse connector 8

N

network connector LEDs 9
NIC (network interface controller) 82
NIC LEDs 6, 7
NMI switch 10, 11

O

Online ROM Flash Component Utility 52
operating system crash 11
operating systems 26, 52
optical device 6, 31
optimum environment 22
Optional Installation Services 21
options installation 24, 27
overtemperature LED 11

P

PCI Express 41
PCI Express riser boards 8, 41
PCI riser board 17, 18, 41
PCI riser cage connector 10
PCI riser interlock LED 11
PCI-X boards 8
POST problems flowchart 62
power connectors, internal 10
power cord 56, 76
power distribution unit 23
power LEDs, system 7, 11
power on problems flowchart 60
Power On/Standby button 6, 7, 15
power requirements 23
power supplies 8, 9
power supply LEDs 9, 11, 12
power supply signal connector 10
powering down 15
powering up 15, 46
PPM failure LEDs 11
preparation procedures 16, 56
problem diagnosis 54, 58
processor failure LEDs 11
processors 10

ProLiant Support Packs 52
PSPs, overview 52

R

rack installation 21, 24
Rack Products Documentation CD 21
rack resources 21
rack stability 56
rack warnings 24, 56
RBSU (ROM-Based Setup Utility) 46
rear panel buttons 9
rear panel LEDs 9
redundant ROM 49
registering the server 26
regulatory compliance notices 71, 73, 76
resetting the system 11
RJ-45 network connector LEDs 9
ROM redundancy 49
ROMPaq utility 48, 49

S

safety considerations 24, 55
SATA drives 14
scripted installation 45
serial connector 8, 10
serial number 47
series number 71
server fault indications flowchart 66
server features and options 27
server setup 21
service notifications 57
shipping carton contents 24
SmartStart autorun menu 45
SmartStart Scripting Toolkit 45
SmartStart, overview 45
space requirements 22
start diagnosis flowchart 58
static electricity 77
storage controller 40, 44
support 80
support packs 45
supported operating systems 52
Survey Utility 51
switches 10
symbols in text 57
symbols on equipment 55
system board battery 70, 75
system board components 10
system board LEDs 11, 12
system maintenance switch 10

system power connector 10
system power LED 8

T

Taiwan battery recycling notice 75
technical support 80
telephone numbers 80
temperature requirements 23
troubleshooting 54
troubleshooting sequence 54, 58

U

UID LEDs 6, 7, 8, 9, 15
updating the system ROM 49
USB connectors 8, 10
USB support 50
utilities 45, 46, 47, 48, 49, 50, 51
utilities, deployment 45, 46, 47

V

ventilation 22
video connector 8

W

warnings 24, 56